



# How to disassemble the Cover Plates of the Canon Powershot SD790 IS Digital Camera

This will remove the outer screws on the cover plates and it will remove the cover from the camera.

Written By: Stanley



## INTRODUCTION

 
This guide will help you to remove the cover plates from your Canon digital camera.

---

### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — The plastic housing

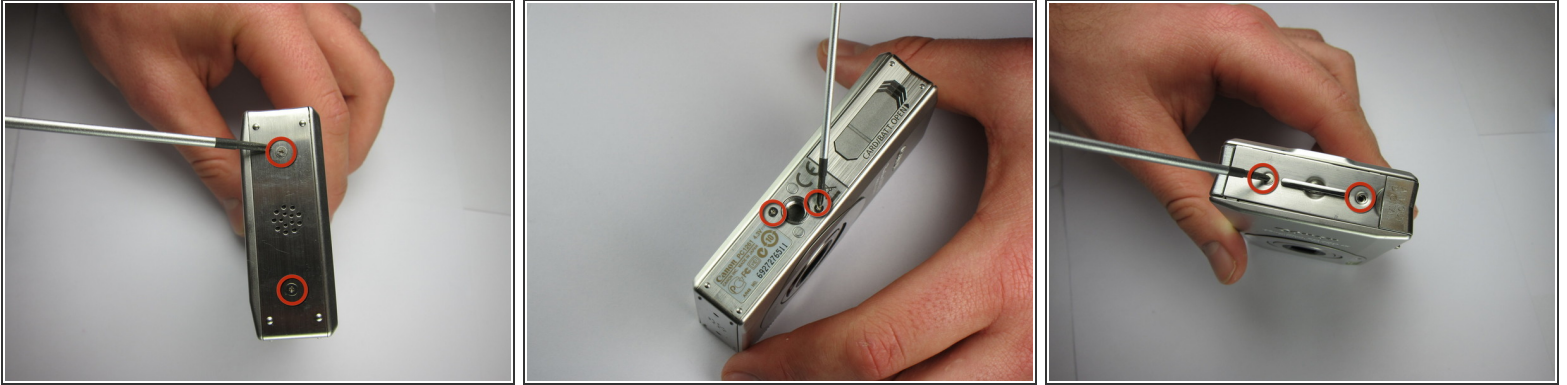


- Using a Tri-Wing screwdriver #0, remove the screws from the sides of the camera.
- There are two on each side, and two on the bottom plate.

## Step 2

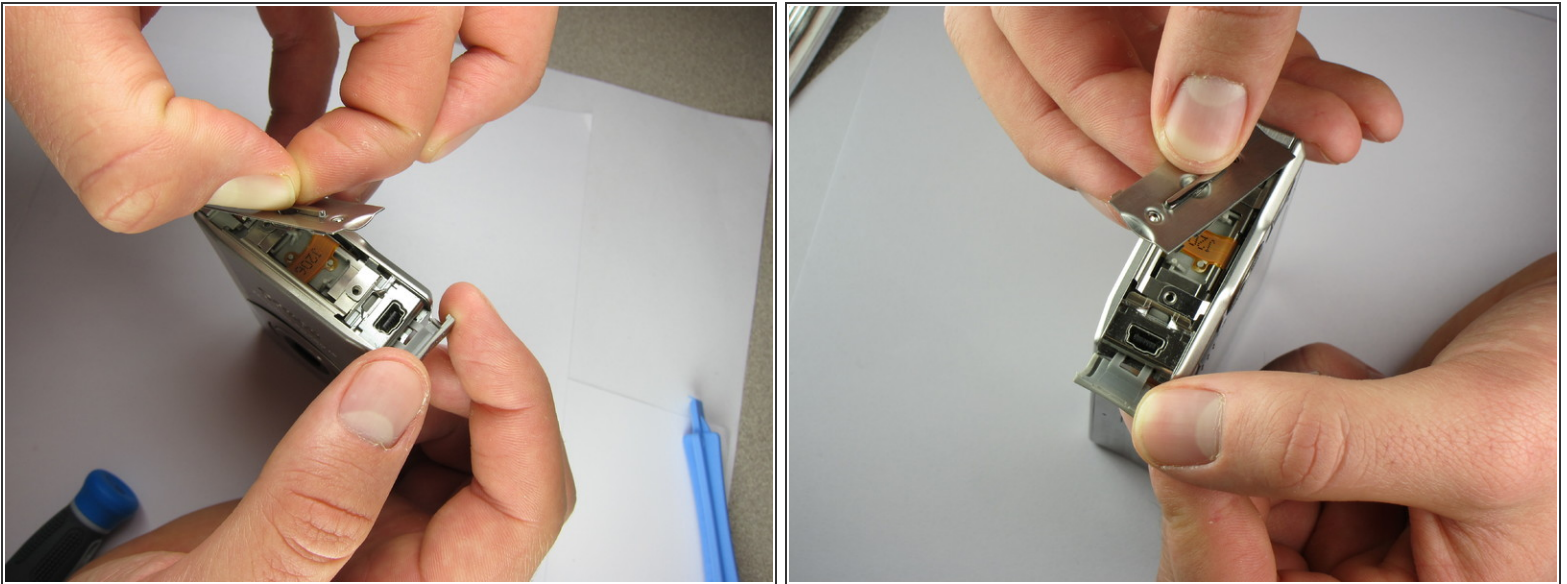 

- Gently grip and remove the side cover while holding the Mini-USB cover open.

## Step 3

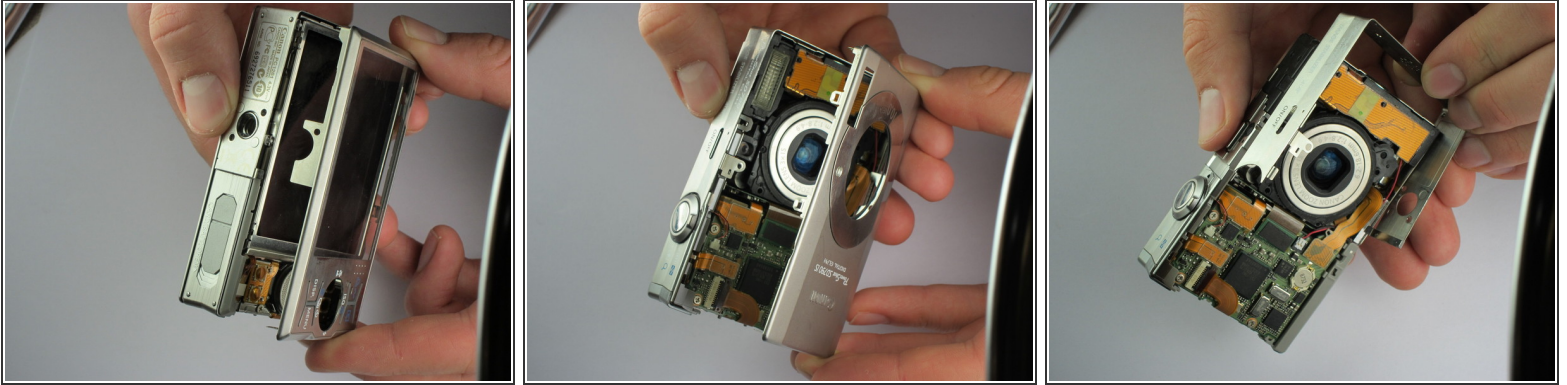 

- Grip the camera from the sides and carefully remove the screen cover. Start at the bottom edge and slowly lift up the cover. Pay special attention to the area with the camera/video switch.
- While still gripping the sides, remove the front cover. Again, start at the bottom edge and slowly lift up the cover. Once you are done with the screen cover, remove the screw by the power switch that is anchoring the side plate and the sides will come off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 09:09:32 PM.