



# LG G Pad 10.1 Rear Case Replacement

This guide will give step-by-step instructions on how to remove the back panel on the tablet device.

Written By: Alex Roszkowski



---

## INTRODUCTION

This guide will demonstrate how to remove the back panel of the LG G Pad 10.1. The removal of the back panel is required to continue with other replacement guides.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Rear Case



- To remove the back panel of the device, start by attempting to fit the plastic opening tool in the crease between the screen and the back panel of the tablet.
  - Try opening picks if the case is not flexing enough, or if it is already cracked to prevent further damage.
  - You can use your hands to push against the corners of the device to attempt to make the gap larger for your plastic opening tool to fit in.
  - If you are replacing your screen because it is damaged, it may be useful to pick away at some of the glass to expose the clips in the edges of the plastic.
    - Insert the corners of your plastic opening tool into the slots that are on the very outside edge of your device to start disconnecting the panel.
- ⚠** On some models, there is a vertical strip of adhesive between the battery and the back cover on the left side of the Verizon logo. Be careful not to damage the battery when separating the adhesive!

## Step 2



- Once the edge of your device's panel is separate from the screen, continue moving around the outside of the device while continuing to pry the two pieces apart from each other.

### Step 3



- Insert another plastic opening tool (or a similar tool) between the screen and the back panel on the opposite side of the device to hold it open.

### Step 4



- Disconnect the battery by inserting the point of a spudger underneath the white tabs on either side of the connector and gently pry up.

To reassemble your device, follow these instructions in reverse order.