



# Canon EOS 60D Rear LCD Screen Removal

In this guide we will be replacing the rear LCD screen. If you crack or damage the screen this will be a step by step process on replacing it.

Written By: Tyler Vaal



---

## INTRODUCTION

If you drop your camera and crack or damage your screen, this guide will help you replace it.


When performing this replacement please remember that the screws you will be removing are very small. Keep them organized as you take them off and find a magnetic holder to put them in. Good luck!

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)  
Blue
  - [Precision Tweezers Set](#) (1)  
Straight, Black
-

## Step 1 — Rear LCD Screen Dissassembly

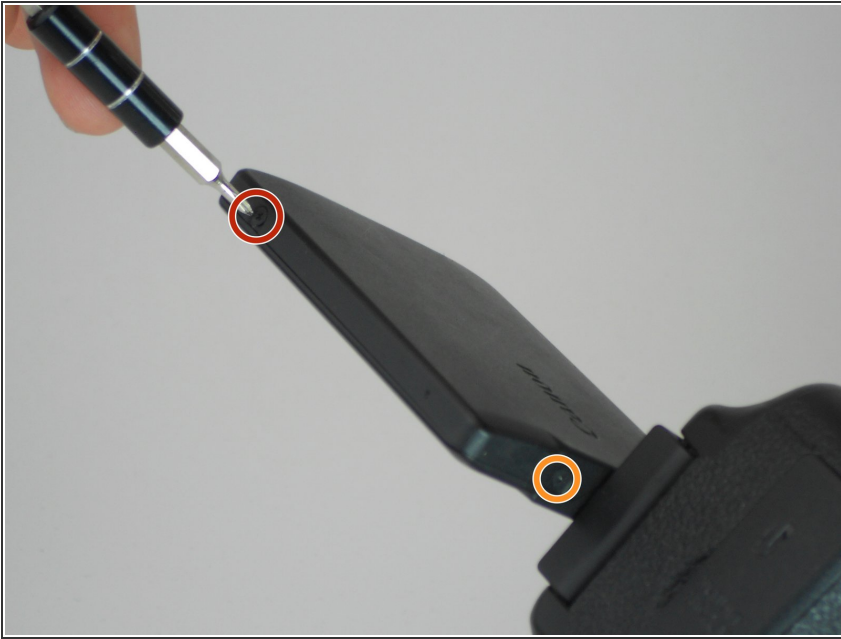


- Take the LCD out of its place to expose the Phillips #PH00 screws.
- Remove the two 2.5 mm Phillips #PH00 black screws on both sides of the LCD screen.
- Next remove the two 3 mm Phillips #PH00 black screws near both sides of the base where the screen swivels.

## Step 2

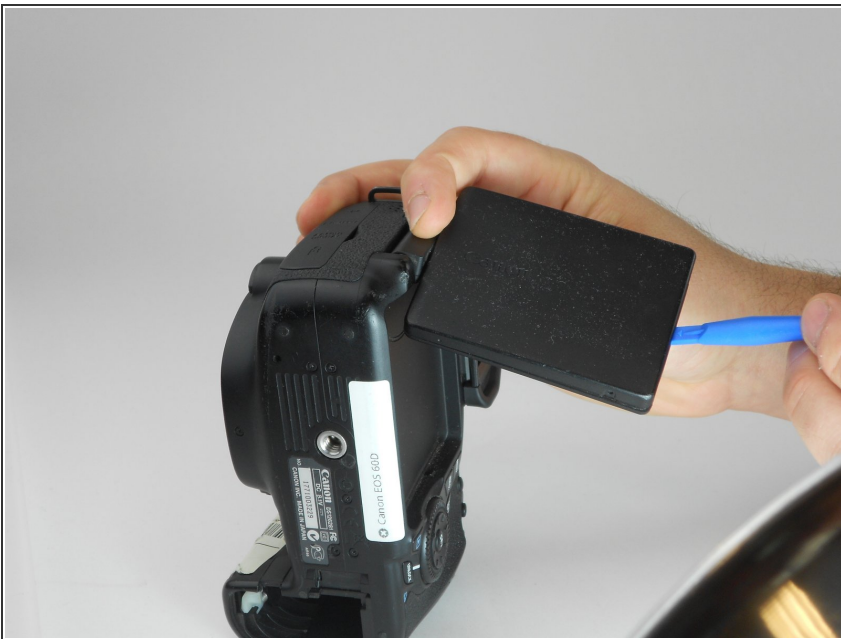


- Using a plastic opening tool, carefully pry off the back cover of the LCD.

### Step 3

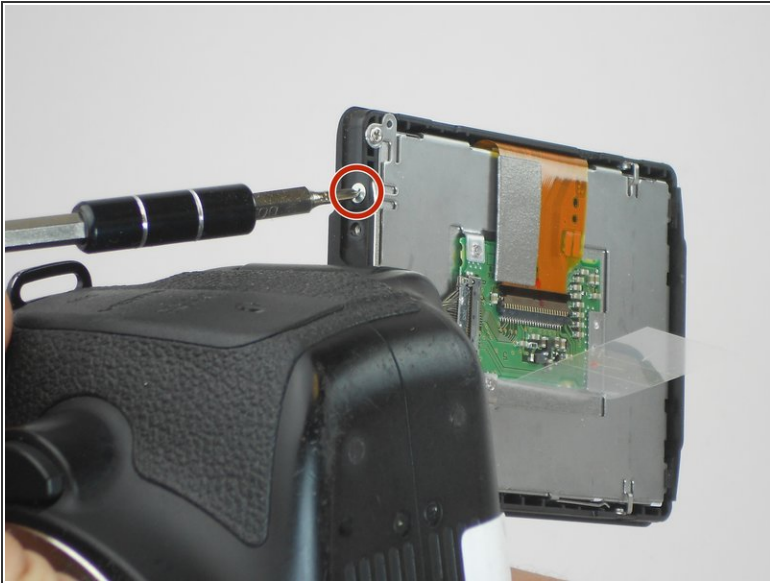

- Remove the 3 mm Phillips #PH00 silver screw on the side of the screen.
- Turn the screen to remove the second 3 mm Phillips #PH00 silver screw.

### Step 4

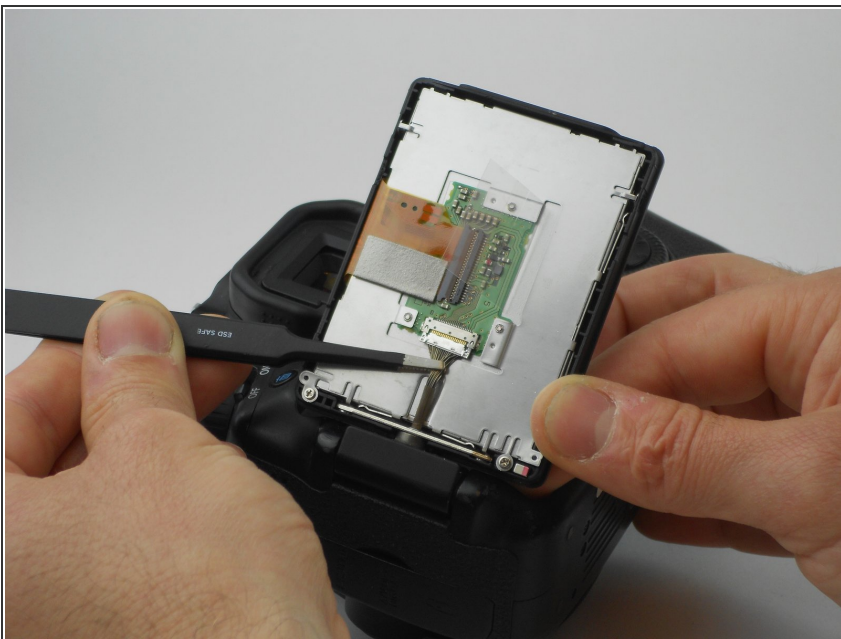

- Using the tweezers, carefully disconnect the rear connector by pulling it away from the screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-10 08:02:18 PM.