 


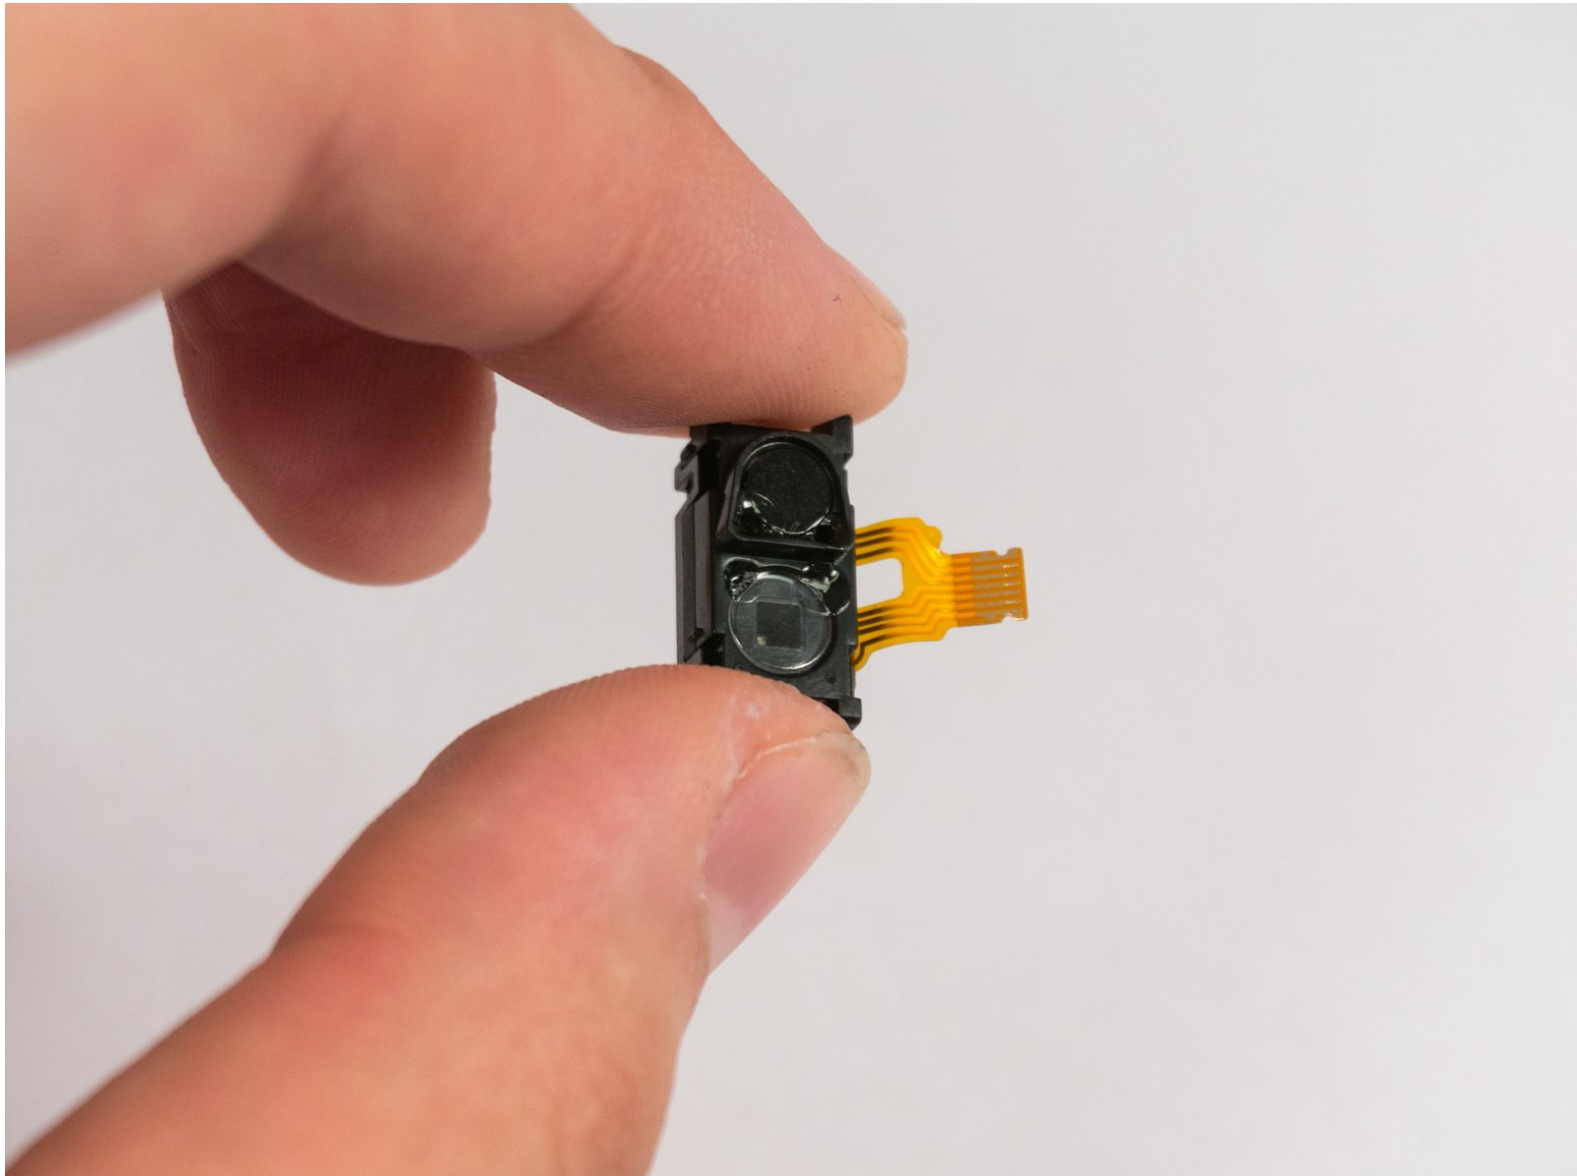

# Fujifilm Instax Mini 8 Infrared Blaster Replacement

This guide helps you recognize the steps to fix your IR blaster on an Instax Mini 8.

Written By: Boyang Wu



---

## INTRODUCTION

Before attempting repairs, please take note of certain risks of receiving shock from the camera's flash capacitor. Also make sure to ground yourself before operating on the camera's motherboard or you might discharge static to crucial components.

---

### TOOLS:

 
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Infrared Blaster



- First, push in the lens and remove the two AA batteries.

## Step 2

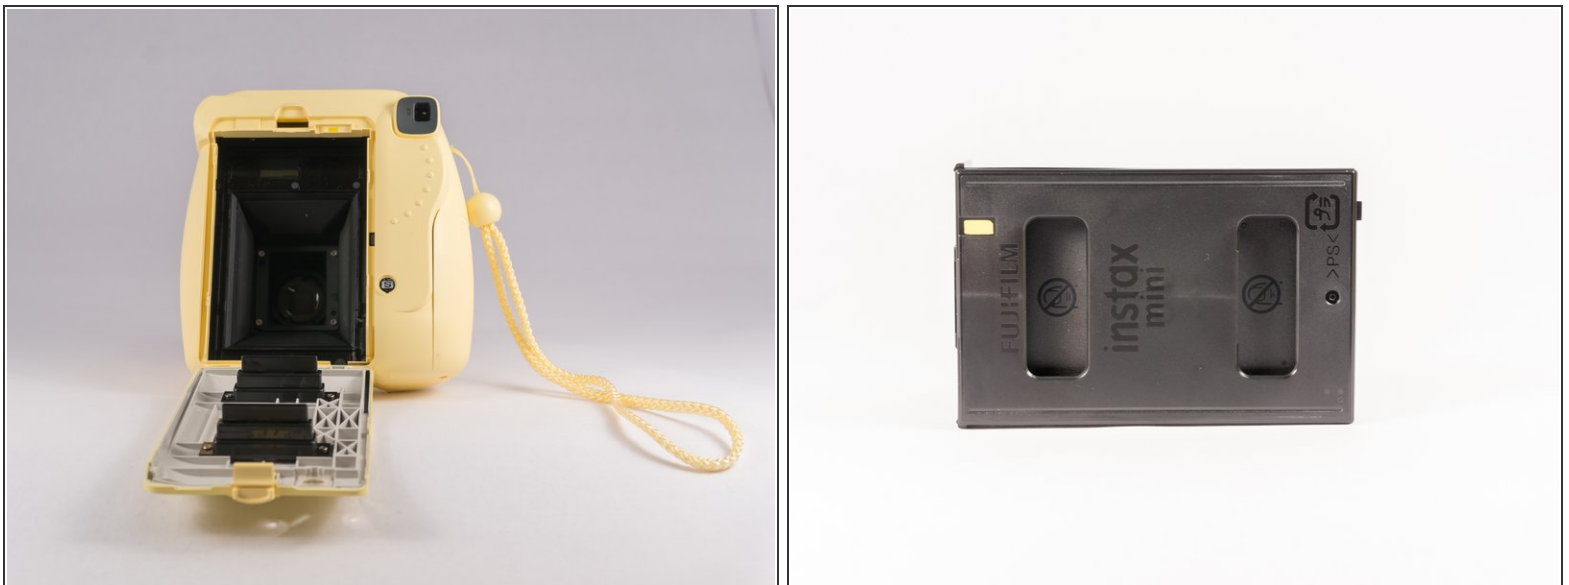


- Open the rear compartment and remove the film cartridge.

### Step 3



 
- Remove screws from bottom of camera with a small #00 Phillips Screwdriver. Then remove screws around the camera. Additionally, there are two screws in the battery compartment which also need to be removed.

### Step 4

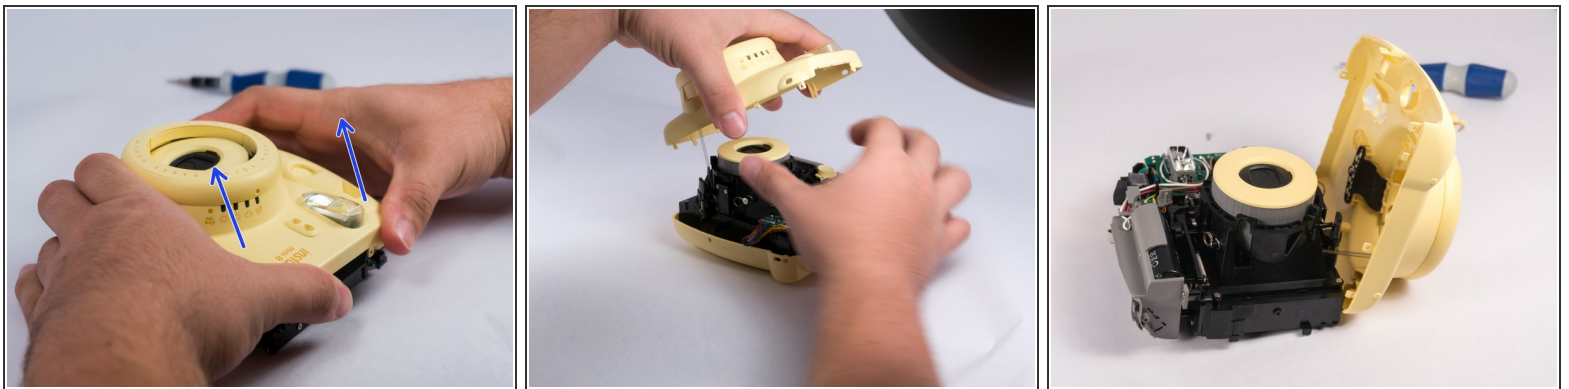

- Once all screws are removed, gently pry open the front casing with your hands or plastic opening tools carefully. Do note that there will be a spring that attaches the front casing and the main circuit board, so refrain from allowing excess tension on the spring.

## Step 5

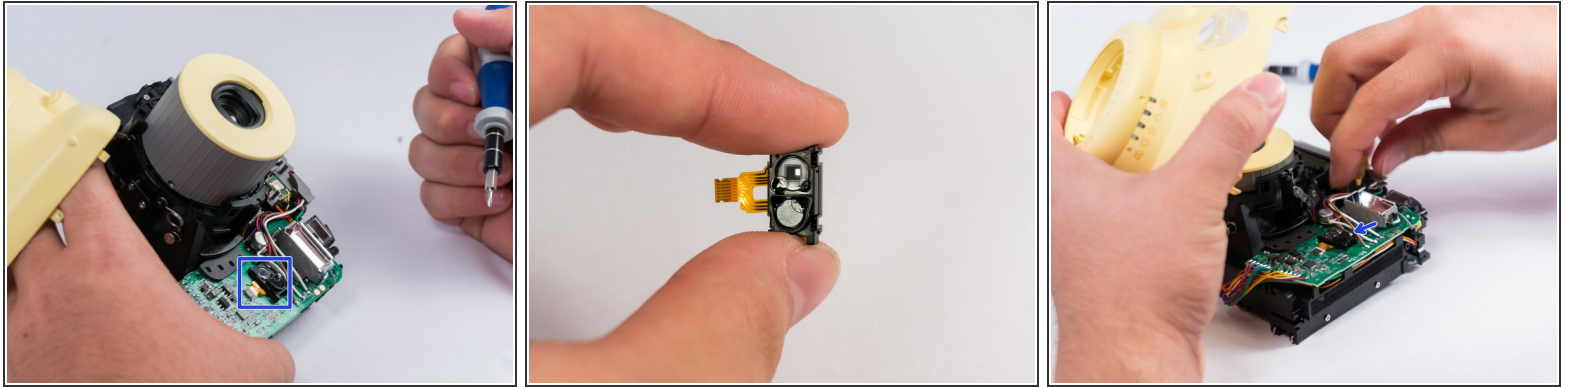 

- Locate the IR blaster, remove the connecting wire ribbon by prying the connector latch open on the motherboard, then sliding it out. Once the wire ribbon is disconnected, the IR blaster can be lifted away from the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-09 09:50:40 AM.