



Logitech UE Boom D-ring Replacement

Guide explaining how to replace the D-ring cover on the UE Boom. Necessary for opening up the device.

Written By: Jose Cruz Arinaga



INTRODUCTION

The D-ring is located on the bottom side of the speaker, furthest from the volume buttons; it is in between the auxiliary and charging ports. Removing this part will also remove the port covers on the device. It is important to note that continuing to tear apart the speaker past this step will void the warranty on your Logitech UE Boom.

Step 1 — D-ring



- Turn the device over. The D-ring will be on the left face of the speaker when viewing the device from this orientation.

Step 2



- Lift the handle on the D-ring and unscrew it.
- Remove the D-ring.

To reassemble your device, follow these instructions in reverse order.