

INTRODUCTION

The battery is located on the bottom of the speaker underneath a rubber protective cover. Use this guide to replace a faulty battery in your SoundLink Mini. Check what model battery your your SoundLink Mini has before purchasing a replacement.



TOOLS:

- [T8 Torx Screwdriver](#) (1)



PARTS:

- [Bose SoundLink Mini Replacement Battery](#) (1)

Step 1 — Battery



- Peel back the rubber battery cover and remove the four circled 6.0 mm screws using a T8 Torx Screwdriver.

Step 2



- While holding the cover back, pull straight up on the battery to remove it.

To reassemble your device, follow these instructions in reverse order.