



HP ProOne 600 G1 Optical Drive Replacement

This guide will teach you how to take out and replace the computer's optical drive.

Written By: Claire Crocker



INTRODUCTION

If your computer is having trouble reading disks it may be time to replace the optical drive. Before performing any work, always remember to completely turn off and disconnect your computer from any power source.

Step 1 — Optical Drive



- Push the unlock tabs on the back of the monitor in and towards each other while sliding the back cover up.

Step 2



- Push the top right corner to the left, and push out the optical drive while holding up the green tab.

Step 3



- Remove the optical drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-09 08:20:13 PM.