




# Asus Zenbook UX32VD RAM Replacement

Instructions on replacing the RAM within the Asus Zenbook UX32VD.

Written By: Paola

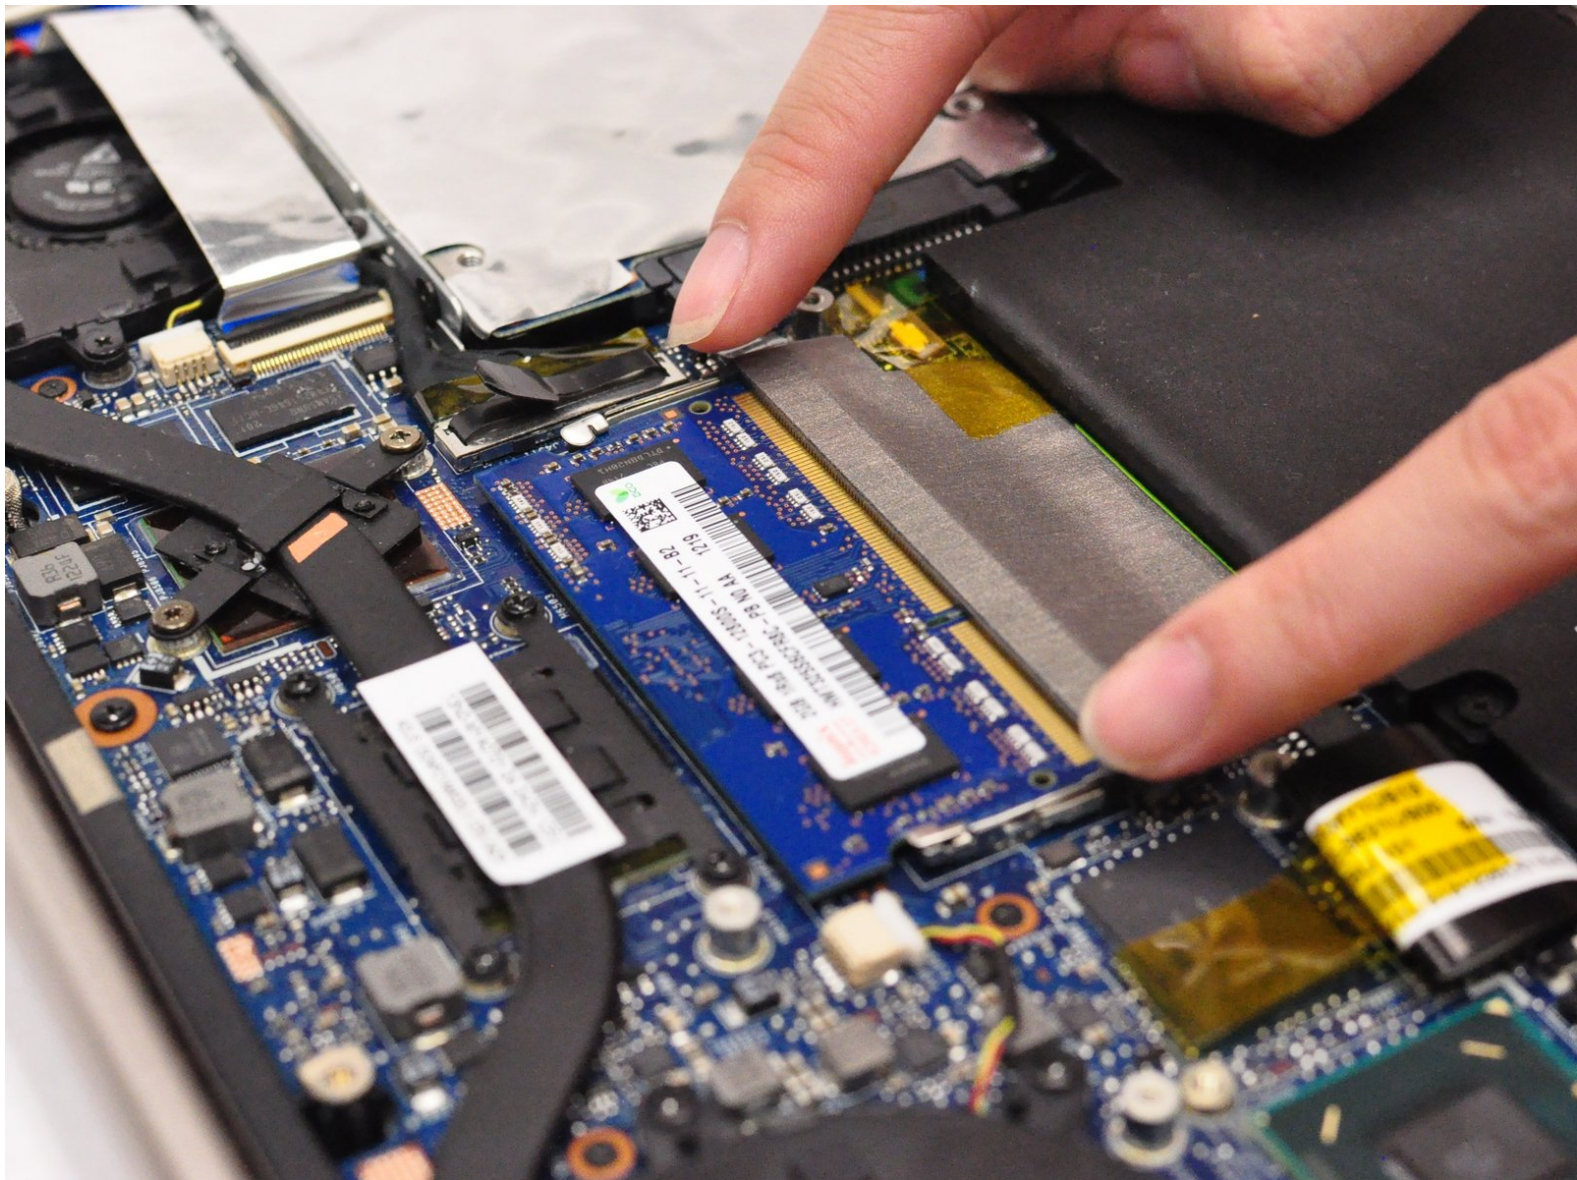

---

## INTRODUCTION




Upgrade the RAM in your laptop.

---

### TOOLS:


- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Bottom Panel

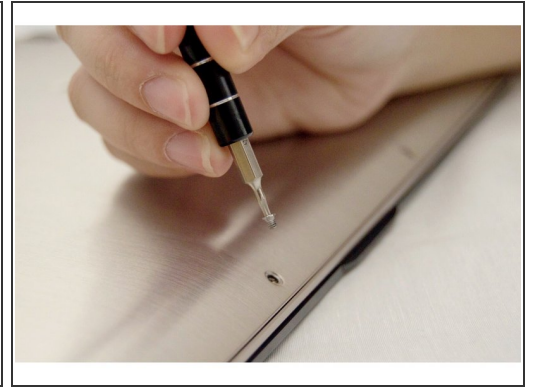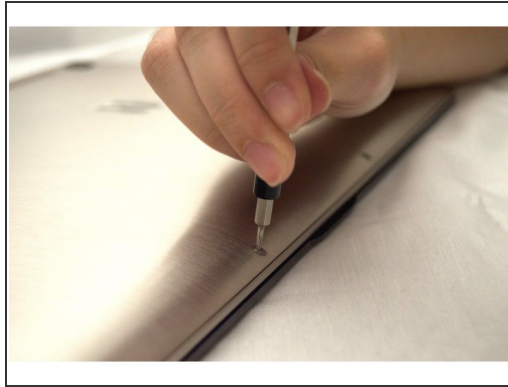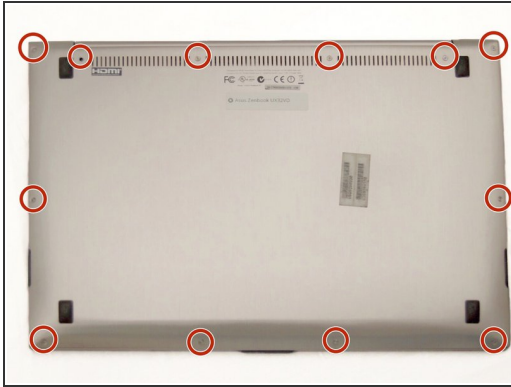


- Remove the twelve 3 mm bottom panel screws with a [T5 Torx Screwdriver](#).

## Step 2

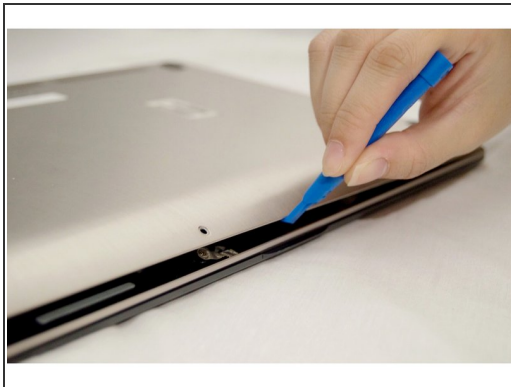

- Use a [plastic opening tool](#) to pry along the perimeter of the bottom panel until it can be easily removed.
- Remove the bottom panel from the body of the laptop.
- Set aside the bottom panel.

## Step 3 — RAM

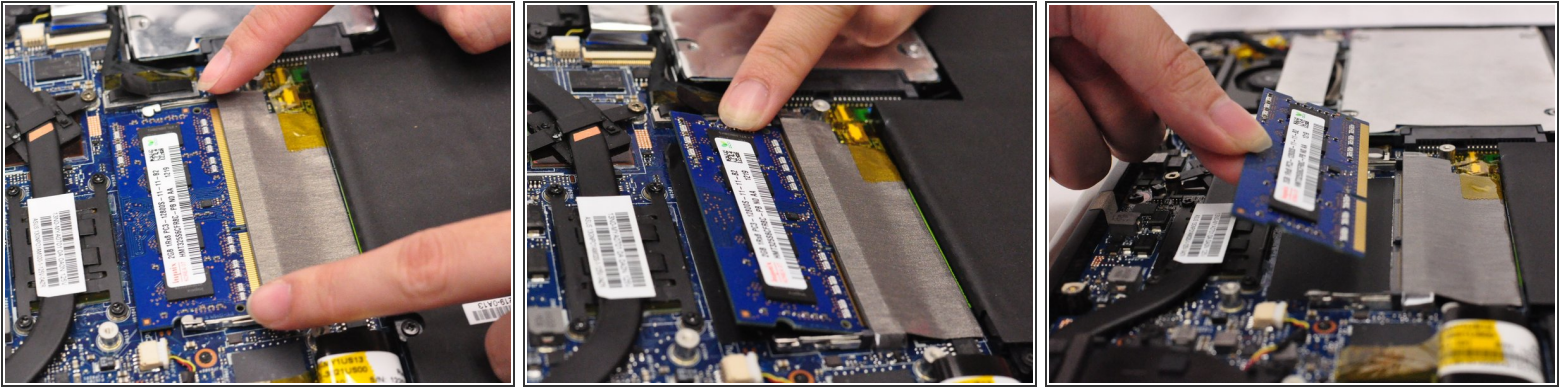

- Push away the RAM retaining arms from the RAM chip.
- ⓘ The RAM chip will spring up once the retaining arms are pushed away from the chip.
- Remove the RAM chip completely.

To reassemble your device, follow these instructions in reverse order.