




# Acer Aspire E5-571 Keyboard Replacement

Keyboard/Touchpad replacement guide for your Acer Aspire E5-571.

Scritto Da: daniel sawyer

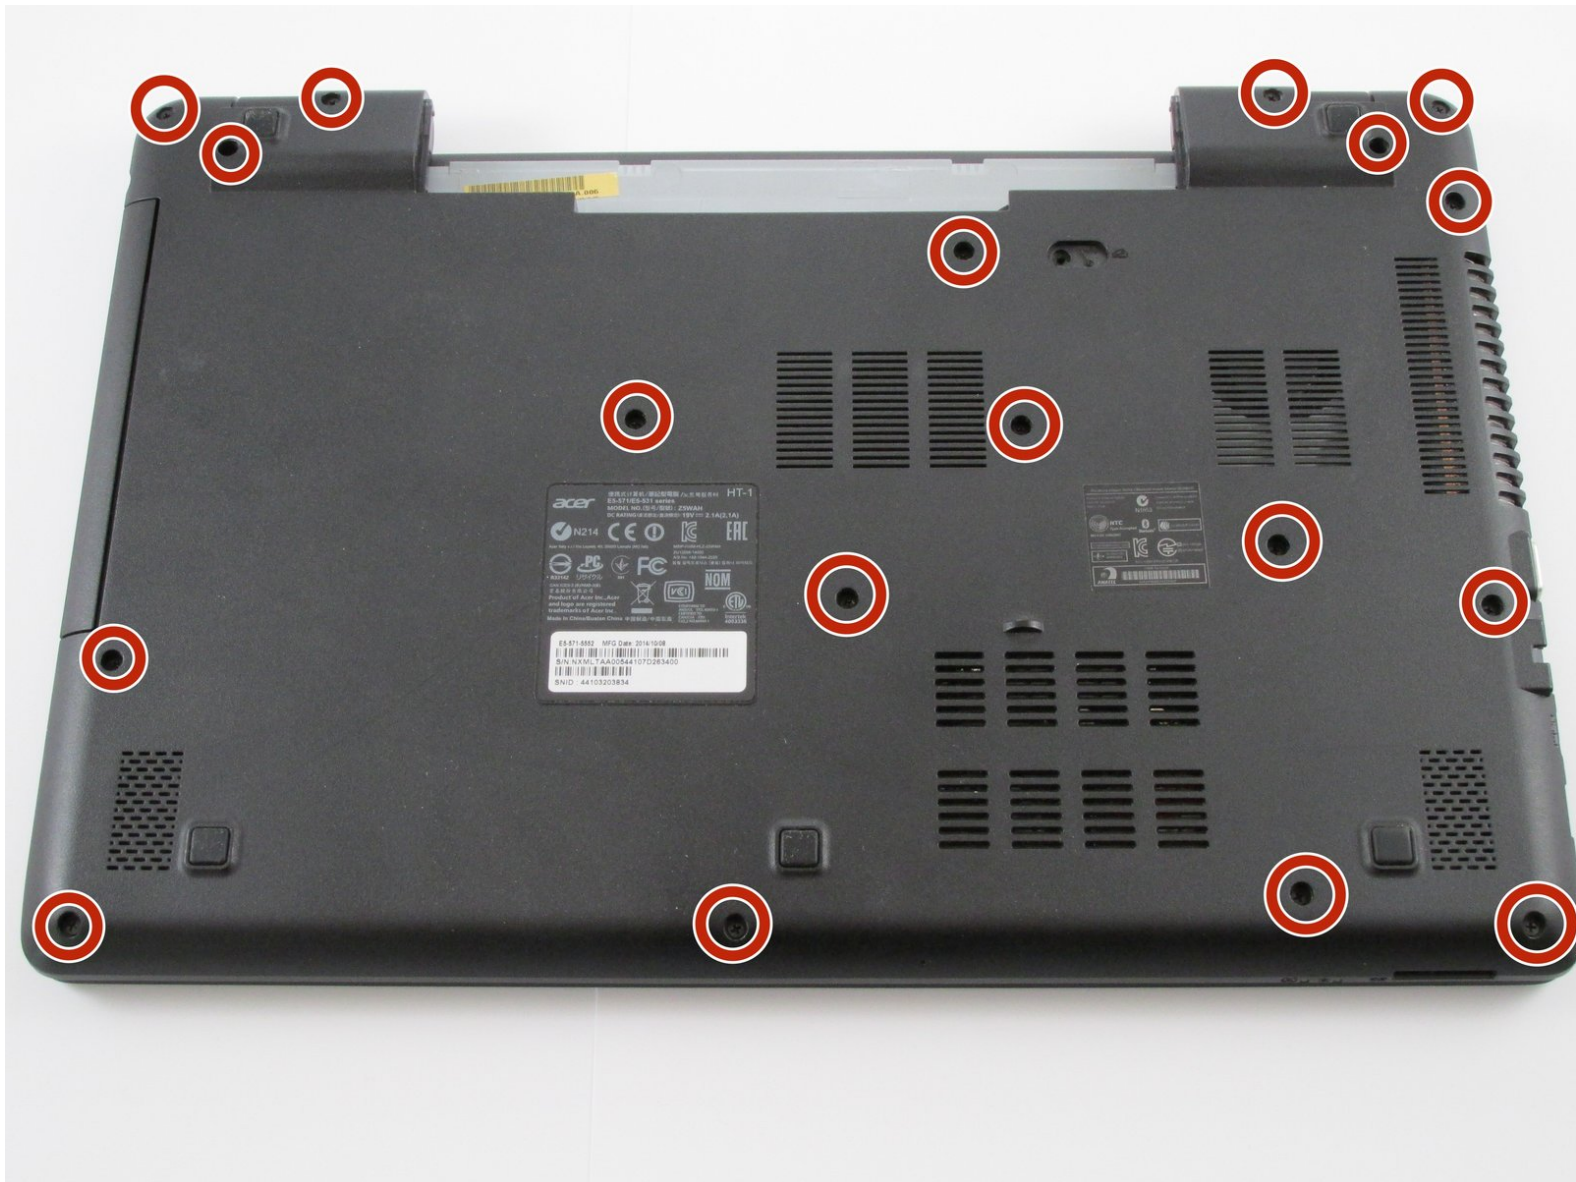

## INTRODUZIONE

This manual is for Acer Aspire model E5-571-5552 to replace any non-operational keys on your personal computer. This demonstrates how to remove the laptop keyboard along with the touchpad. Beware, the keyboard and touchpad are connected during the removal process. Prior to proceeding with this manual, inspect the keyboard for any liquid or debris that may have fallen into the keyboard causing it to be non-functional or not work properly. Follow this link to learn how to clean your laptop [Guida alla pulizia della tastiera del laptop](#). Before continuing with the process, make sure to turn off your laptop completely and unplug it from any external power sources.



### STRUMENTI:

- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Metal Spudger](#) (1)
- [iFixit Opening Tool](#) (1)

## Passo 1 — Battery



**⚠ Make sure the laptop is shut down.**


- Flip the laptop upside down with the battery facing towards you.

## Passo 2




- Place the pointed end of a spudger into the battery lock and slide it to the left until you hear the battery release.

### Passo 3

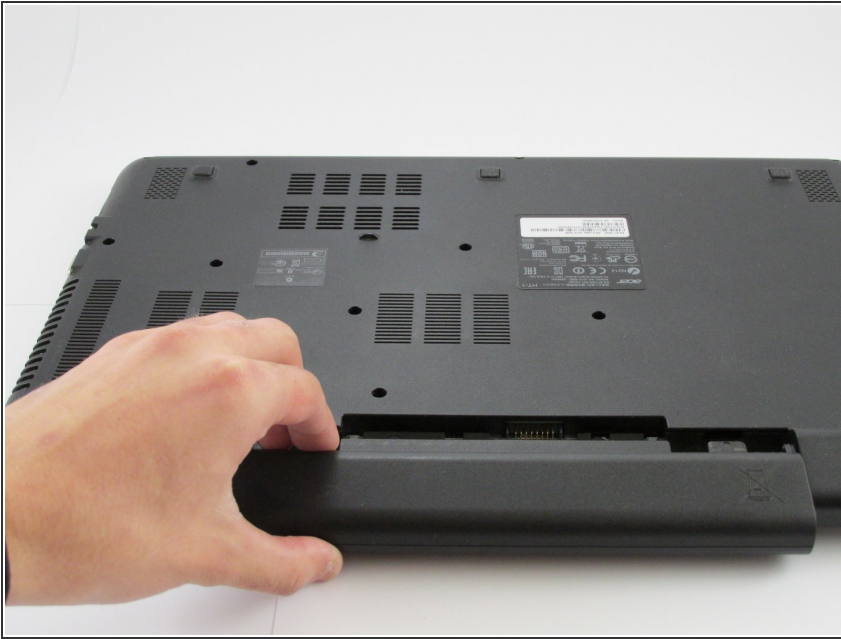

- Pull the battery towards you to remove it from the laptop.

### Passo 4 — Keyboard

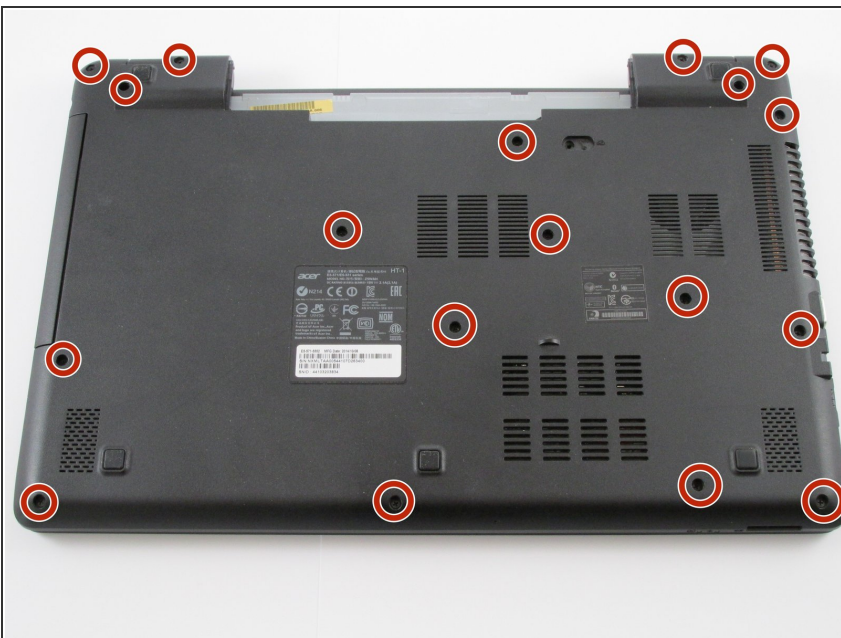

- Remove all eighteen 8 mm screws with a Phillips #0 screwdriver.


## Passo 5



- Move around the edge with metal spudger and carefully pry apart the clips holding the keyboard in place.

⚠ Be careful not to break the plastic clips and do not remove the keyboard yet.

## Passo 6

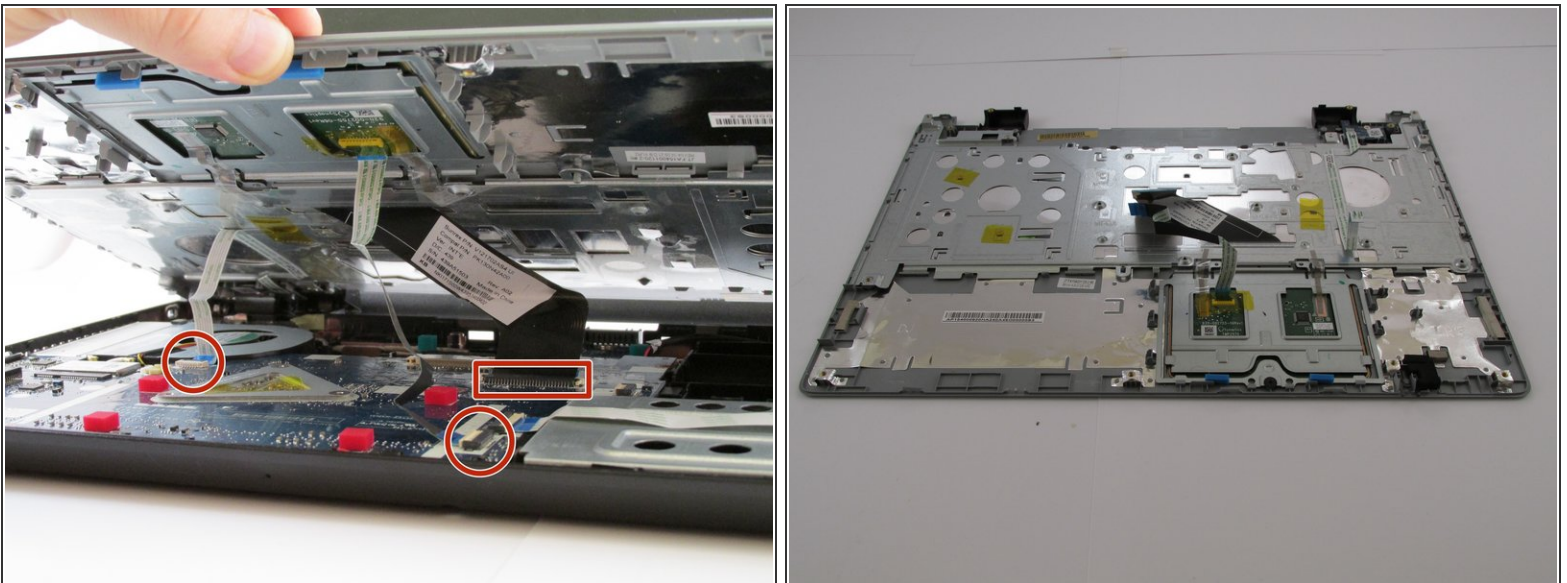

- Carefully detach the three ZIF ribbons connected to the motherboard by flipping up the white hinge.
- Lift up on the keyboard and the whole top should come right off, including the touchpad.

To reassemble your device, follow these instructions in reverse order.