



Garmin Vivoactive Wristband Replacement

Wrist strap looking worn down or broken? Switch it out for a new one.

Written By: Nathan LeTavec



INTRODUCTION

An active user of the Garmin Vivoactive may find that the wristband may start to break down over time, or get bored with the stock color provided with the device. Replacing the two wristband ends is a simple procedure that requires minimal time and can help make the Vivoactive look fresh out of the box again.

This band can also be changed based on the event you're wearing the watch to. Some options are fancy leather while others are simple rubber. This feature affords some customizability .



TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [T6 Torx Screwdriver](#) (1)



PARTS:


- [Vivoactive Band](#) (1)
-

Step 1 — Wristband



- Hold the the metal screwdriver, with a T5 Torx bit, in your dominant hand.
- Hold the rubber screwdriver, with a Hex T6 Torx bit, in your other hand.
- While holding the rubber screwdriver in place, simultaneously unscrew the pin (counterclockwise) with the metal screwdriver in your dominant hand.

Step 2

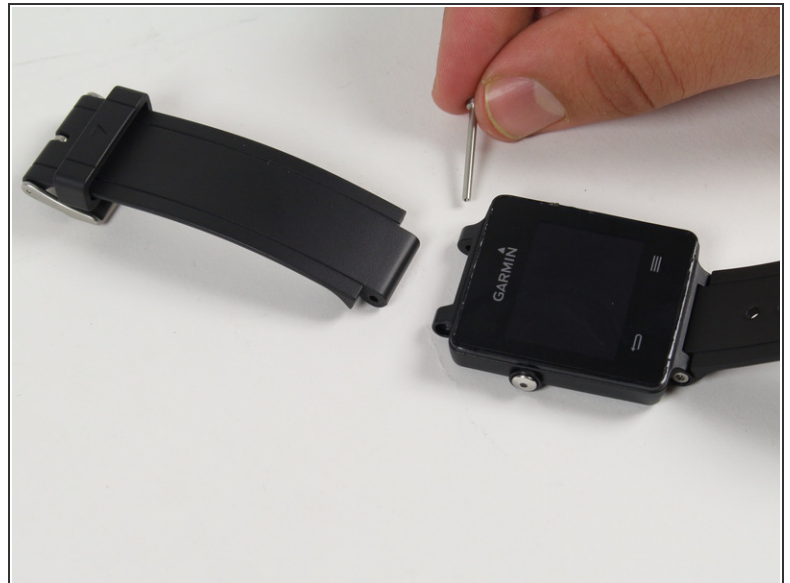

- Once the 1mm screw is removed, reinsert the metal screwdriver in that same hole.
- Gently push the strap's pin out. It will begin to protrude from the other end.
- Use your fingers to grab the exposed pin and slide it free. The strap should now be disconnected from the device.

Repeat steps to remove the second band end. To reassemble your device, follow these instructions in reverse order using new band ends.

This document was last generated on 2017-06-17 09:13:08 PM.