



Kindle Fire HD 7" 2013 USB/Charging Port Replacement

If your Kindle won't charge or won't connect to a computer, your USB port might be damaged. The USB ports are subject to wear. Luckily, on the 2013 model, the USB port is just a plug-in part. No soldering! See the video. <https://youtu.be/mYIm3pFKybs>

Written By: WilliamTR

INTRODUCTION

How to open your 2013 Kindle's casing.

How to disconnect the battery.

How to change out the USB/charging port.

[video: <https://youtu.be/mYIm3pFKybs>]

]

TOOLS:

- [iFixit Opening Tools](#) (1)
(a guitar pick helps too)
- [T3 Torx Screwdriver](#) (1)
(but I just used a 1.4m/m flathead)
- [Tweezers](#) (1)
(help hold small screws in spaces too tight for your fingers)

PARTS:

- [Kindle Fire HD 7" \(2nd Gen\) 2013 Charging Assembly](#) (1)

I hope this helps!

This document was last generated on 2017-06-24 02:55:30 PM.