



Bose Soundlink II Battery Replacement

Use this guide to replace a damaged or nonoperational battery.

Written By: Kevin Bailey



 **TOOLS:**

- [T10 Torx Screwdriver](#) (1)
-

Step 1 — Bose Soundlink II Cover Removal



- Using a screwdriver with a T-star torque, remove the two 13 mm screws from the bottom of the speaker.

Step 2



- Pull on the black tab that says "BOSE" on the front cover.
- The back of the cover is latched on by two 13 mm screws. To remove the cover, you must move the back of the cover upwards to unlatch from the screws.

Step 3 — Battery



- Using the screwdriver with the T-10 star tip, remove the 6.75 mm. screws marked in red.

Step 4



- Carefully remove the battery by pulling it out of the speaker.

To reassemble your device, follow these instructions in reverse order.