



# Dell Inspiron 1564 Laptop Battery Replacement

Dell Inspiron 1564 Laptop Battery Replacement

Written By: Matthew Johnson



---

## INTRODUCTION

If your Dell Inspiron 1564 Laptop is not holding a charge or will not turn on, a battery replacement may be the solution.

---



### PARTS:

- [Dell Inspiron 1564 Battery](#) (1)
-

## Step 1 — Battery




- Place the laptop on a flat surface and open the cover.

## Step 2




- Unplug the power cord from the laptop.

### Step 3

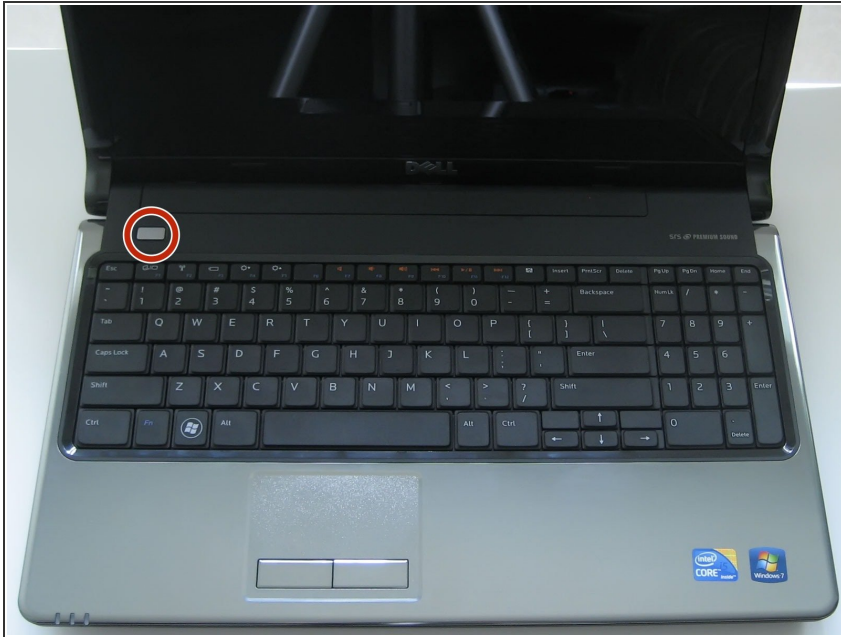

- Turn the laptop off by holding down the silver power button in the upper left corner until all the lights turn off.
- **Important: If the laptop is not turned off, there is a risk of electrical shock when replacing the battery.**

### Step 4

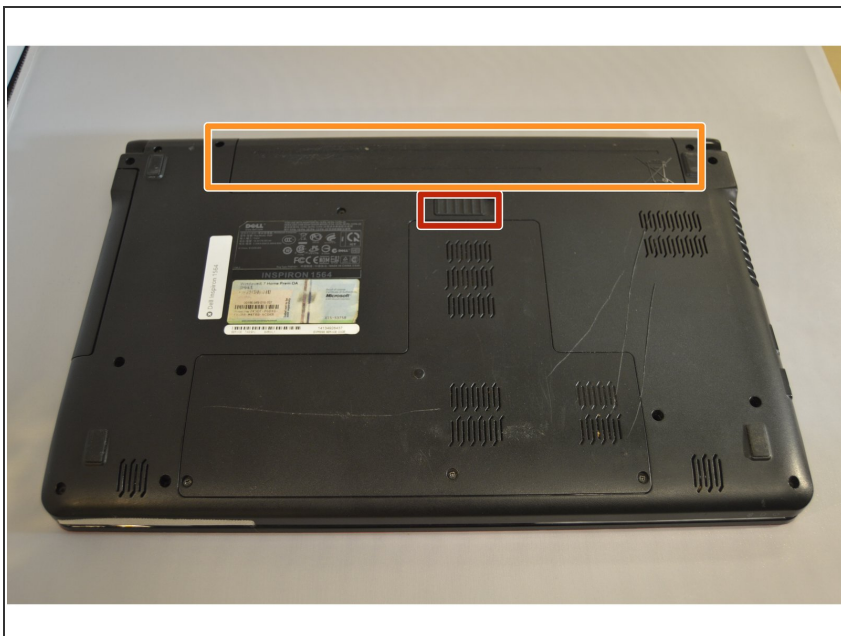

- Close the cover of the laptop and turn the laptop over so that the bottom is facing up.
- First, locate the release latch (indicated by the red box). Second, locate the battery on the bottom of the laptop (indicated by the orange box).

## Step 5



- Slide the battery release latch to the right and hold it. With your other hand pull the battery away from the laptop and release the latch.
- - **Discard the old battery according to your local laws.**

## Step 6



- Slide the new battery into the battery slot and push the battery in until you hear the click of the latch.

## Step 7



- Return your laptop to its upright position and plug in the laptop.
- **- Make sure the battery is fully charged before using your laptop. Please refer to your laptop manual for instructions on charging your laptop battery.**

- A new Dell Inspiron 1564 battery can be bought at [www.laptopbatteryhq.com](http://www.laptopbatteryhq.com) for about \$30