



Sony Action Cam Mini HDR-AZ1 Battery Replacement

This guide will step you through replacing a faulty or old battery.

Written By: Brody Bridges



INTRODUCTION

Are you experiencing problems with the battery?

Step 1 — Battery



- To access the battery, first make sure the camera is out of the case.
- Push down on the door lock, located on the rear of the action cam.
- ⓘ The door is unlocked if the little yellow square is showing.
- Pull on the panel door, located on the side opposite the LCD screen, and it should now pop open.

Step 2



- Open the side panel outward to reveal the battery.
- ⚠ Be sure not to break the small piece of plastic securing the door to the camera.
- Use the pull tab to pop the battery out of place.

To reassemble your device, follow these instructions in reverse order.

