



Dell Inspiron 600M RAM Replacement

How to remove and replace the RAM in your Inspiron 600M

Written By: Taylor Woods



INTRODUCTION

Before removing the RAM you will need to remove your battery.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [PC2700 512 MB RAM Chip](#) (1)
- [PC2700 1 GB RAM Chip](#) (1)

Step 1 — Battery




- Push in the tab on the battery and lift up. The battery should detach very easily.

Step 2 — RAM



- Remove the single screw securing the RAM compartment and pull up to reveal the RAM.

Step 3

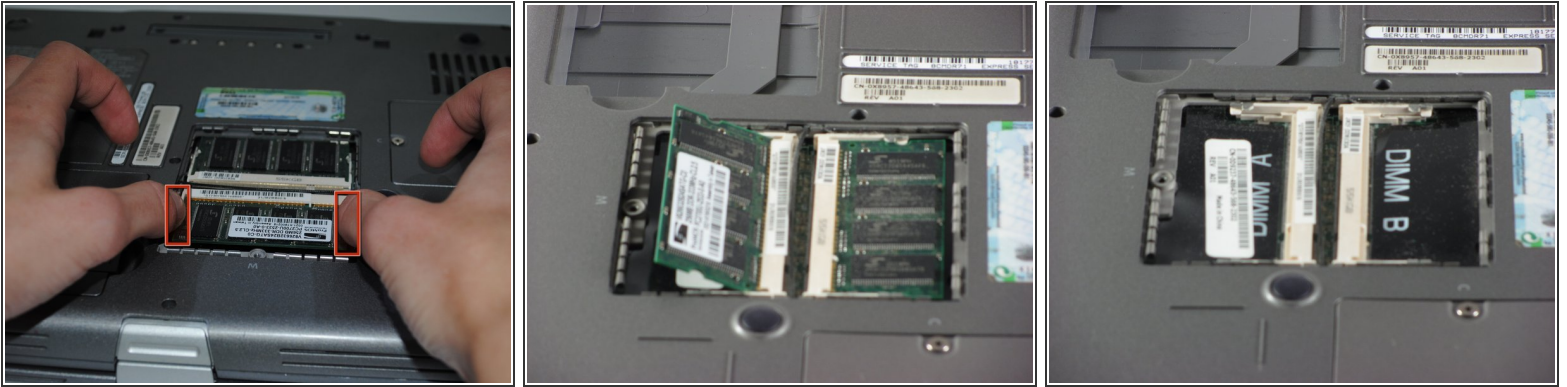

- Push on the small white metal tabs on both sides of a module to unlock it.
- The RAM should be stick out at approximately a 45 degree angle. Grasp the RAM by the sides and pull straight out to remove it.
- ⓘ If the RAM sticks slightly, wiggle it back and forth gently to loosen it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-15 07:20:59 PM.