



# Astro A50 Battery Replacement

This guide shows the user how to replace the rechargeable battery located in the headset.

Written By: Nicholas Eriksen



---

 **TOOLS:**

- [Small Phillips Head Screwdriver](#) (1)
  - [Soldering Iron](#) (1)
-

## Step 1 — Battery




- i** In order to replace the battery you must completely disassemble the ear piece with the mic. First, remove the foam cushions from the earpiece. Do this by simply pulling the foam away from the earpiece.
- Remove the 4 screws with a small Phillips head screw driver.

## Step 2




- i** Once the black, plastic cover is removed, proceed to remove the two marked visible screws. Next, peel back the foam in the top left and right corners of the speaker (During reassembly this will need to be re-glued.) Once the screws are exposed, remove them with the same screwdriver.

### Step 3

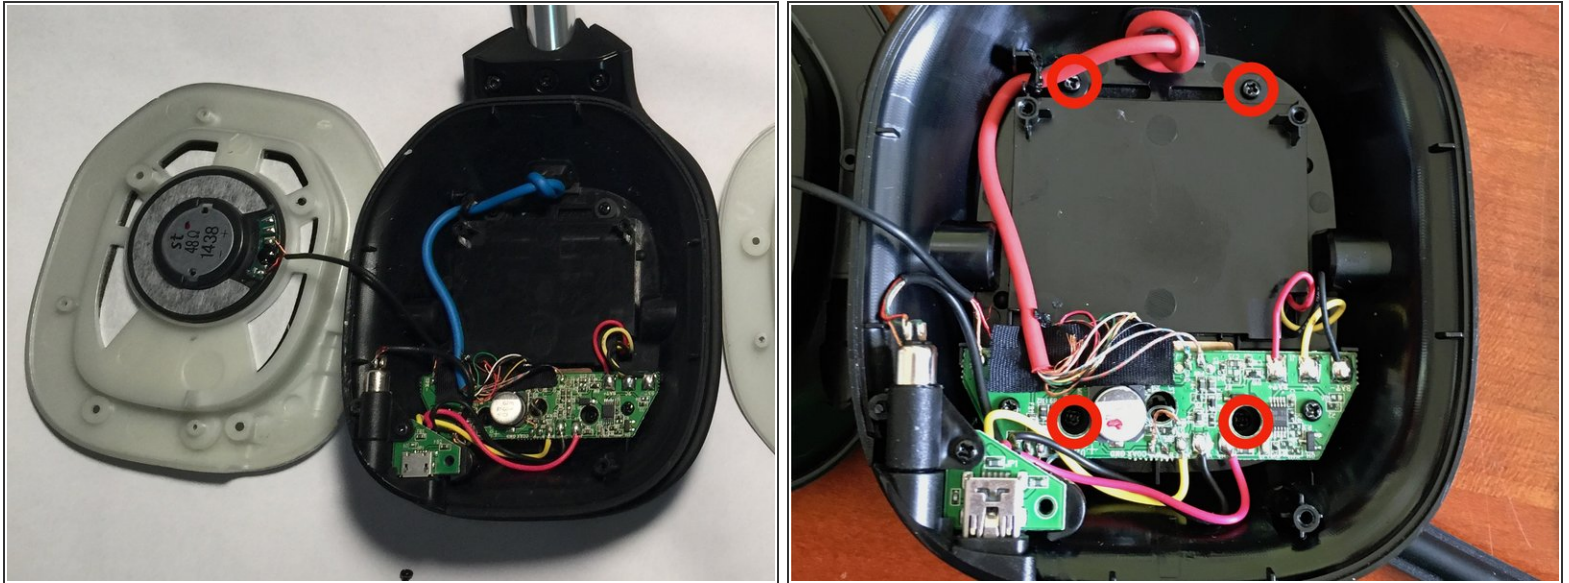

- Once all the screws have been removed, gently fold the speaker over to expose the internals of the earpiece. Be sure to use caution and avoid breaking wires.
- Remove the 4 visible screws (Be sure to use caution.) These screws remove the faceplate on the outside of the headset.

## Step 4

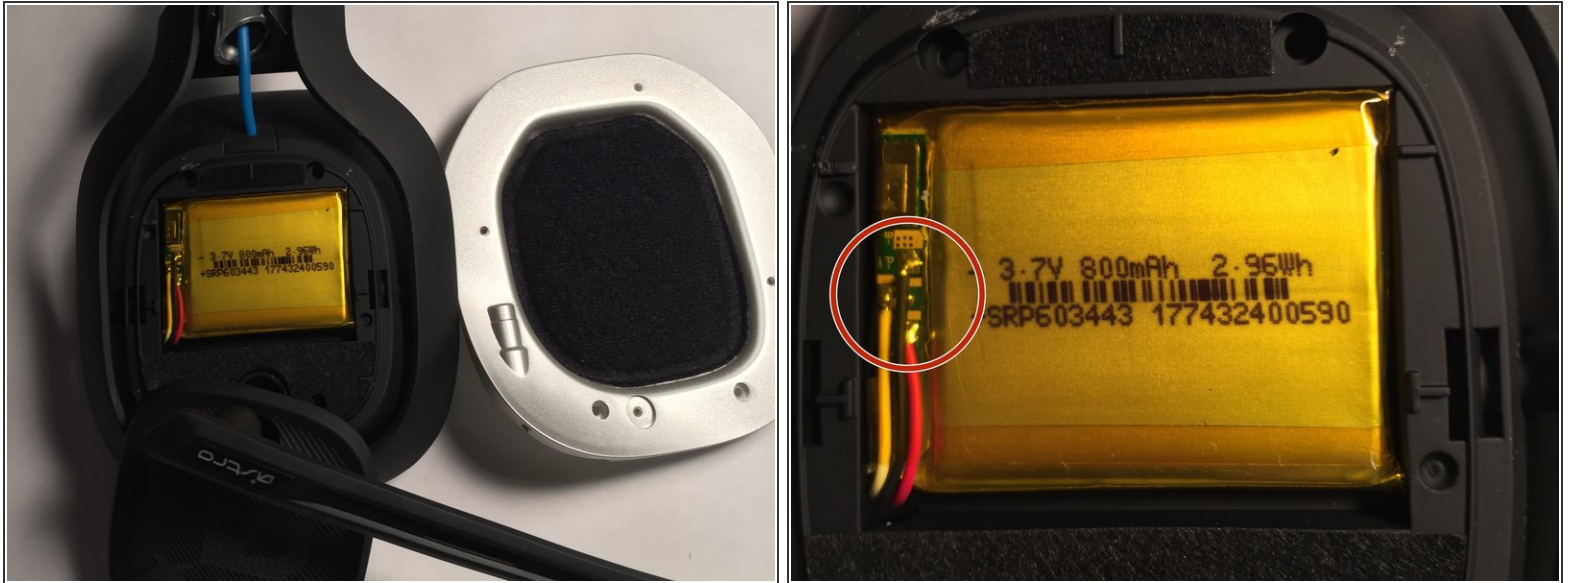

- Once all the screws have been removed, turn the earpiece over. Then, rotate the microphone and cover plate away from the battery housing (This will expose the battery.)
- [Desolder](#) and disconnect the wires from the old battery.
- ⓘ The battery is glued in the case. Wedge a plastic opening pick or spudger under the battery to break the adhesive. Do not bend or puncture the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-10 09:15:17 AM.