



Stuck Shutter Fix Replacement

A stuck shutter is a common failure mode for digital cameras.

Written By: Marina Bayardo



INTRODUCTION

A stuck shutter is a common failure mode for digital cameras. The camera may take black pictures (for shutter stuck closed), or the pictures may be bright and overexposed, especially when taken (for shutter stuck open).

Step 1 — Shutter




- **Step 1. Turn the camera on:** Put the camera in any mode other than Auto, and turn off the flash. And turn off the LCD screen and press the DISP or DISPLAY button.

Step 2



- **Step 2. Move the camera to any mode:** For many canon cameras this will be shutter priority mode, that will give you the longest exposure time without flash.
- **Step 3. Take a picture.**

Step 3

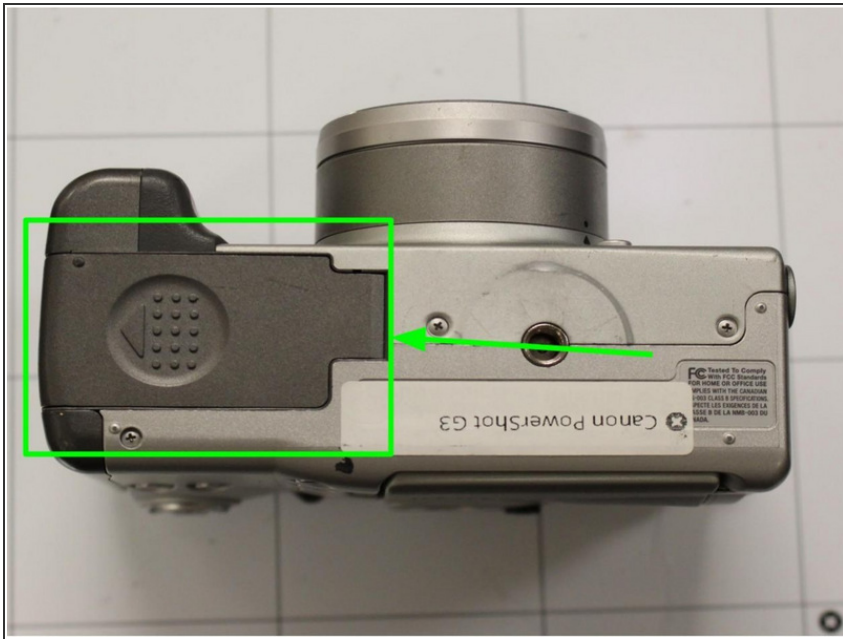

- **Step 4. Open battery door:** After a few seconds open the battery door and then close it again. This will momentarily interrupt power during the exposure time.
- **Step 5. Repeat:** Repeat procedure until the shutter becomes unstuck.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-02-09 10:04:31 PM.