



# Apple Powerbook 5300 Memory Replacement

How to remove and replace the memory on the Apple Powerbook 5300.

Written By: Scott



---

## INTRODUCTION

In this guide you will learn how to remove and replace the memory on the Apple Powerbook 5300.

---

### TOOLS:

- [T8 Torx Screwdriver](#) (1)
-

## Step 1 — Battery



- Position the Powerbook towards you with the monitor closed.
  - Press the battery removal latch located on the right side of the front panel.
  - Gently slide the battery out.
- ⚠ The keyboard, front pane, and hard drive are connected to the laptop's logic board via a ribbon cable. Lift up slowly on each component with one hand and disconnect the ribbons from their ports on the logic board.

## Step 2 — Keyboard



- Turn the laptop over and remove the three T8 torx screws from the bottom panel.

### Step 3



- Turn the laptop back over and open the monitor.
  - With the monitor facing towards you, gently pull up on the keyboard panel from the bottom.
- ⚠** With the keyboard turned over as pictured, carefully remove its ribbon cable from the connection port on the logic board. Use a spudger to lift the white plastic retainer about 1/16" to release the cable.

### Step 4 — Memory



- Pull up on the large green memory chip on the left side of the laptop. It will simply lift out.

To reassemble your device, follow these instructions in reverse order.