



Sony Cyber-shot DSC-TX55 Front Case Replacement

Written By: Megan East



 **TOOLS:**

- [Phillips #00 Screwdriver \(1\)](#)
-

Step 1 — Front Case




- Using the Phillips #00 Screwdriver, remove all of the 0.3 cm screws from both left and right panels.

Step 2



- Gently remove the back cover.

Step 3

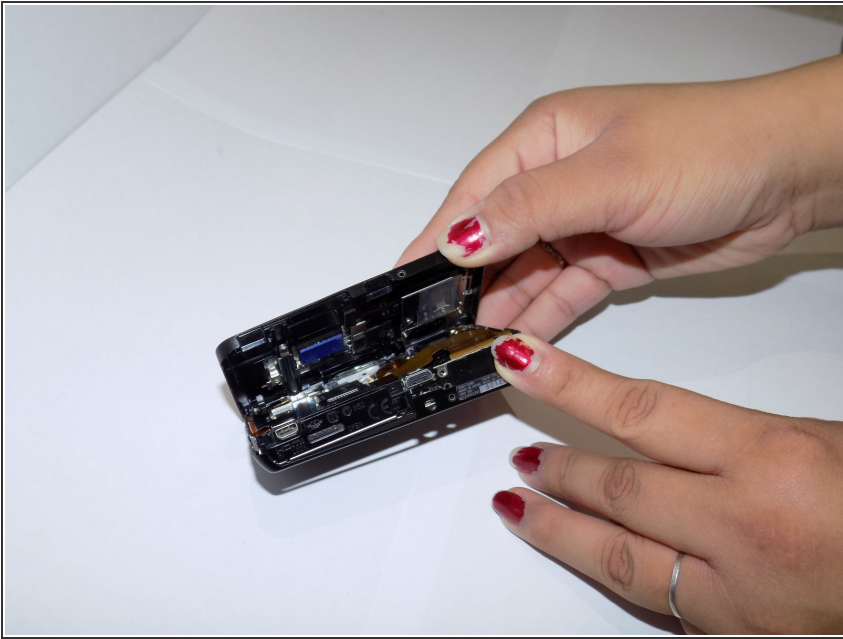

- ⓘ You may need to use some force to remove the front case due to it being stiff.

Step 4



- Follow the steps in reverse order with the new front case to complete the replacement.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-11 07:37:12 PM.