



Sony Cyber-shot DSC-TX55 Battery Replacement

Written By: Megan East



Step 1 — Battery



- Find the battery door labeled with arrows that is located on the bottom of your device.

Step 2



- Slide the battery door in the direction that the arrows are pointing. The door will open outwards.

Step 3



- Slide the blue locking tab to release the battery. Slide the battery out of the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-12-19 08:38:51 PM.