



# Nikon Coolpix E5700 Battery Replacement

Use this guide to replace your battery.

Written By: Raana



## INTRODUCTION

This guide will walk you through the necessary steps to access the battery in the Nikon Coolpix E5700.

## Step 1 — Battery



- Use your finger tip to slide the battery release tab toward the battery symbol on the E5700.
- Open the battery door.

## Step 2



- Pull the battery out of the E5700.
- ⓘ It may be necessary to wiggle the battery while pulling to free it from its pocket in the case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-17 03:39:10 AM.