



# Samsung Propel SD Card Replacement

This guide will show you how to replace a full SD Card.

Written By: James Cote



## **INTRODUCTION**

An SD Card needs to be replaced when it gets damaged or when it gets full of music and pictures.

## Step 1 — SD Card



- Find the slot on the side of the phone and open the slot using your finger.

## Step 2



- Remove the full SD card and replace it with a new, blank card

## Step 3



- Cover the port back with the cover and you're done.

---

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 04:05:08 AM.