



Braun Cruzer 6 Type 5417 Battery Replacement

Disassemble trimmer and change batteries in the Braun Cruzer 6 - Model: 5417

Written By: Zweikeks



INTRODUCTION


Use this guide to disassemble, remove, and replace the batteries in the Braun Cruzer 6 - Beard and Hair Trimmer, Model: 5417

Step 1 — Braun Cruiser 6 Type 5417 Battery Replacement



- Remove the trimmer's removable head.
- Remove the two slot headed screws holding the cover to the body of the trimmer.
- Open the cover.
- *This is a good opportunity to clean the internal components of the trimmer - hair could prevent the battery from powering the trimmer properly.*

Step 2

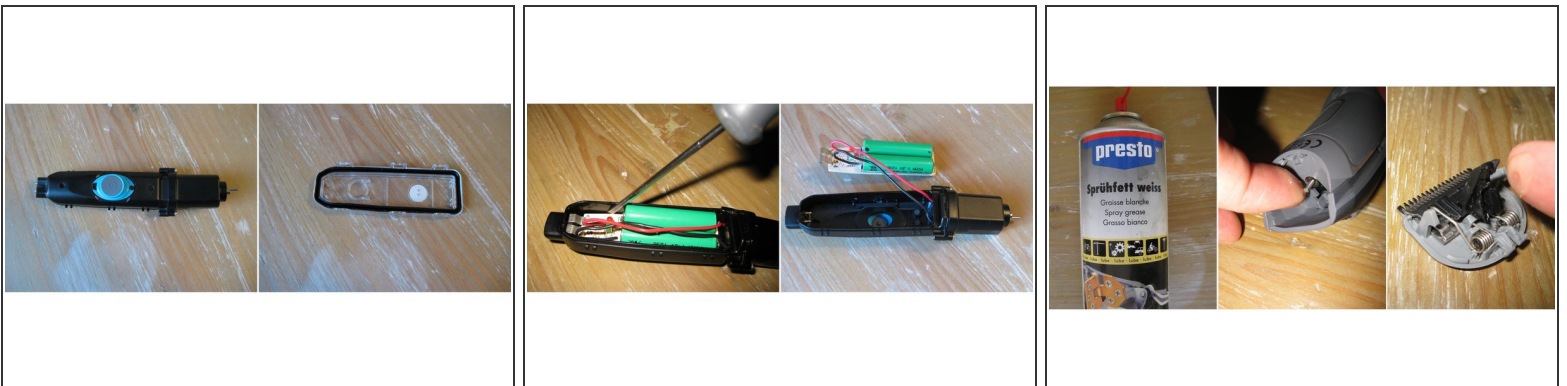

- Remove the back cover.
- Using a flat head screw driver, remove the screw holding the power board in place.
- Use compressed air to clean the motor. *Take this opportunity to lubricate the trimmer with an anti-rust spray or WD-40.*
- Replace the 2 AA batteries and replace the power board.

Step 3



- *This step shows the removal of the upper cover. This area also can benefit from cleaning and lubrication to help improve the performance of the beard trimmer.*

To reassemble your device, follow the above steps in reverse order.