



HDD Hard Drive Replacement

Written By: Felice Suglia





TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:

 
- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)
- [New Item](#) (1)

Step 1 — Battery




- Unlock the battery latch on the right.
- Unlock the battery lock on the left.
- Remove the battery pack from its slot.

Step 2 — Access to Components 1

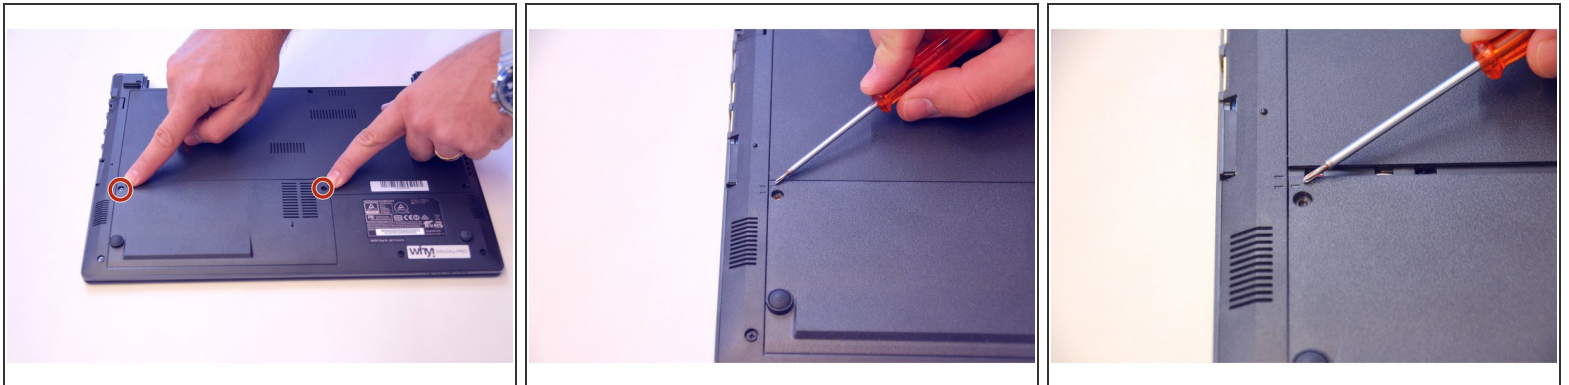

- Using the Philips # 0 screwdriver, unscrew the 2 screws from the bottom cover.
- Check the marks indicating the direction in which the cover must be removed.
- Remove the bottom cover by removing it in the direction of the markers.

 Step 3

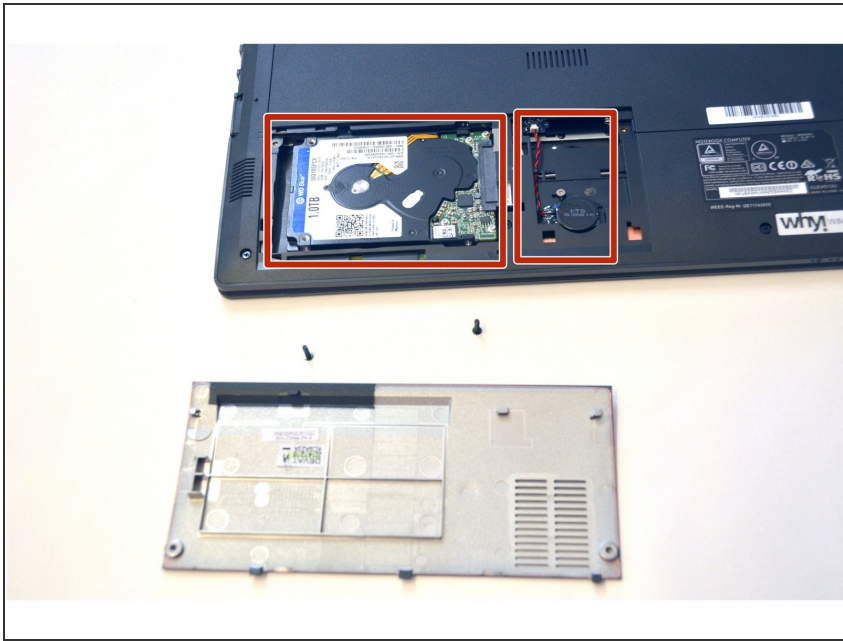

- HDD hard disk and BIOS stack components appear.

Step 4 — HDD hard disk



- Remove the HDD from its location.

For reassembly, follow the instructions in reverse order.