



Microsoft Lumia 532 Dual SIM Disassembly

A simple teardown of the Lumia 532 Dual SIM.

Written By: [deleted]



INTRODUCTION

How to remove the rear case, battery, and SD card for replacement.

TOOLS:

- [T6 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Heat Gun](#) (1)
-

Step 1 — Removing the obstacles



- Remove your SD card, battery, SIM(s) and cover. To remove the cover, you grab the top of it and put your thumb on the middle of the case and pull towards yourself.
- Hmm... I wonder what that part (marked in green) does....

Step 2



- Unfortunately, because I don't have the necessary tools to continue this teardown, I will let anyone with a Lumia 532 (Dual SIM or not) continue this guide and improve it.
- Tip: If you don't have a Torx Screw Driver or bit, use a small flat screw driver. Align it in a position where you can spin the Torx screws safely. This chips the paint off the screws, though.