



# Sony VAIO PCG-933A Floppy Disk Drive Replacement

Although they are pretty much extinct now, if you need to replace a floppy disk drive, you're in the right place.

Written By: Sara Lillard



## **INTRODUCTION**

This repair guide illustrates how to replace the Floppy Disk Drive.

## Step 1 — Battery



- Turn the laptop upside down
- The battery is located on the front right side of the laptop; the opposite side from the floppy disk drive.

## Step 2



- As shown by the arrow, slide the plastic cover up and then pull out and downwards.
- You should now be able to pull the battery out.

### Step 3 — Floppy Disk Drive



- With the laptop facing you, turn the laptop upside down.

### Step 4



- Locate the release switch in the center of the laptop, shown here.
- Slide the switch, and hold in place. The floppy disk drive is now free and should easily slide out.

## Step 5



- To replace, insert the new floppy disk drive with the wording facing down.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 01:44:18 AM.