



# Sony VAIO PCG-933A DVD Drive Replacement

Perform laser eye surgery on your laptop.

Written By: Sara Lillard



---

## INTRODUCTION

Repairing/replacing the DVD drive.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Turn the laptop upside down
- The battery is located on the front right side of the laptop; the opposite side from the floppy disk drive.

## Step 2



- As shown by the arrow, slide the plastic cover up and then pull out and downwards.
- You should now be able to pull the battery out.

### Step 3 — Keyboard



- Remove the four 16mm Phillips screws bordering the edge of the laptop, indicated here.

### Step 4



- Remove the 4mm Phillips screw on the right rear side of the laptop next to the audio ports.
- This will release the speaker grille.

## Step 5



- Flip the computer back over and open the screen.

## Step 6




- Slide the blue speaker grille (located above the keyboard) to the right and gently pull upward. The grille will still be connected by a white electrical strip.
- Carefully pull out the white electrical strip.

## Step 7



- Remove the 4mm Phillips screw in the center (located to the left of the green strip).
- Carefully pull the green strip straight up to disconnect it.
- The keyboard can now be removed.

## Step 8 — DVD Drive

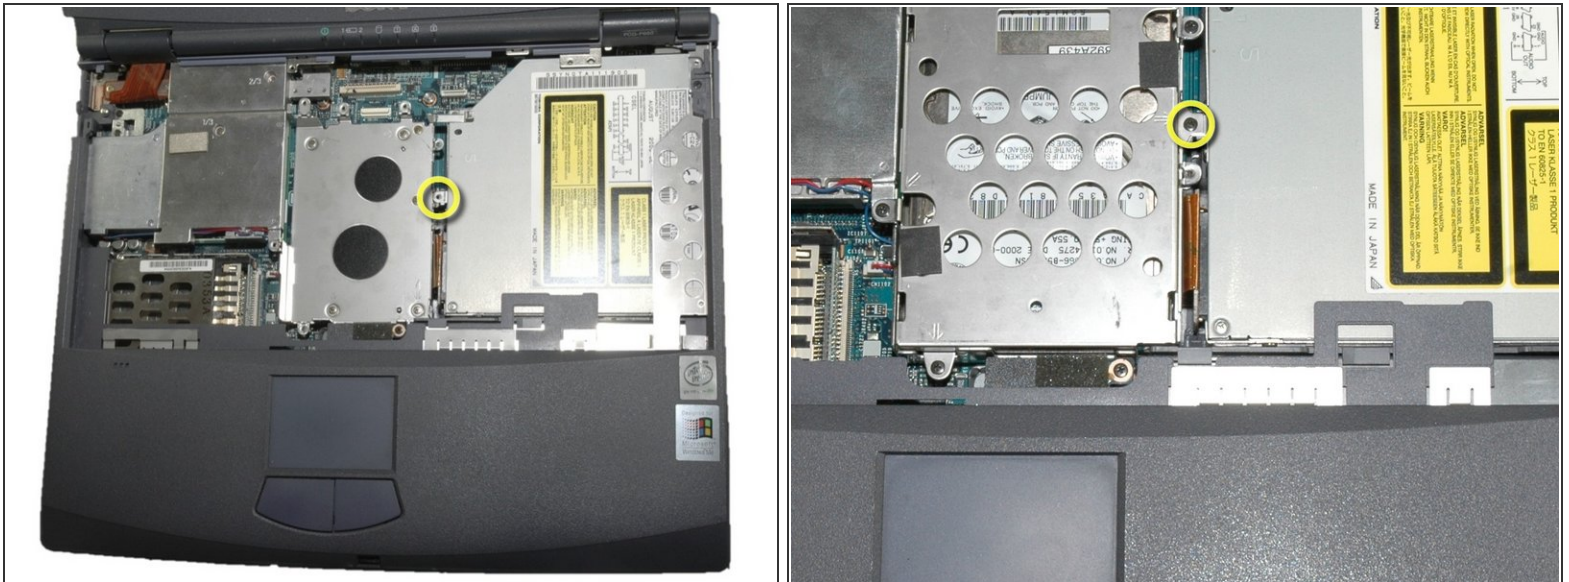

- Remove the 4mm Phillips screw that connects the hard drive cage to the DVD drive.
- Carefully remove the copper wire strip.

## Step 9



- Slide the DVD drive out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-20 01:19:09 AM.