



# Canon EOS 30 Front Panel Replacement

How to remove your camera's front panel.

Written By: Sterling Vinson



## INTRODUCTION

Removing the front panel is the first step to accessing many internal components. Removal is safe, simple, and only requires a screwdriver.

---

### **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)

### **PARTS:**

- [Canon EOS 30 Inner Eyepiece](#) (1)
-

## Step 1 — Front Panel



- Remove the two 4.8 mm black screws above the lens on the front of the camera.

## Step 2



- Remove the 4.3 mm black screw under the lens ring, and the 4.8 mm black screw under the camera.

### Step 3



- Remove the 4.8 mm black screw on the left side of the camera.

### Step 4



- Remove the front panel by lifting it away from the camera's body.

To reassemble your device, follow these instructions in reverse order.