



Canon PowerShot G16 Battery Replacement

Replace the battery in your Canon PowerShot G16

Written By: Jonathan Harger



INTRODUCTION

Please follow these simple steps to replace your battery. Perform this procedure if you have a replacement battery or intend to charge your battery outside of the camera.

Step 1 — Battery



- Open the battery flap on the bottom of the camera by applying pressure and pushing in the direction of the arrow.
- Remove your finger and allow the flap to pop open.

Step 2



- Push the brown lever so that it pivots counterclockwise.
- Grip and remove the battery.

To reassemble your device, follow these instructions in reverse order.