



Panasonic DVD-RV31 Player Outer Case Replacement

First step to gaining access to the components of the DVD player.

Written By: Kevin



 **TOOLS:**

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Disk Tray Cover



- Eject the disk tray from the DVD player before removing power supply.

Step 2



- Evenly lift upward on the disk tray front cover (not slanted, as pictured). This will allow for easier disassembly of the player.

Step 3 — Outer Case



- Remove 3 screws running along back edge of case cover.
- Remove 2 screws from each side of case cover.

Step 4



- Grab edges of cover, pull outward slightly, and pull straight up.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-24 01:32:51 AM.