


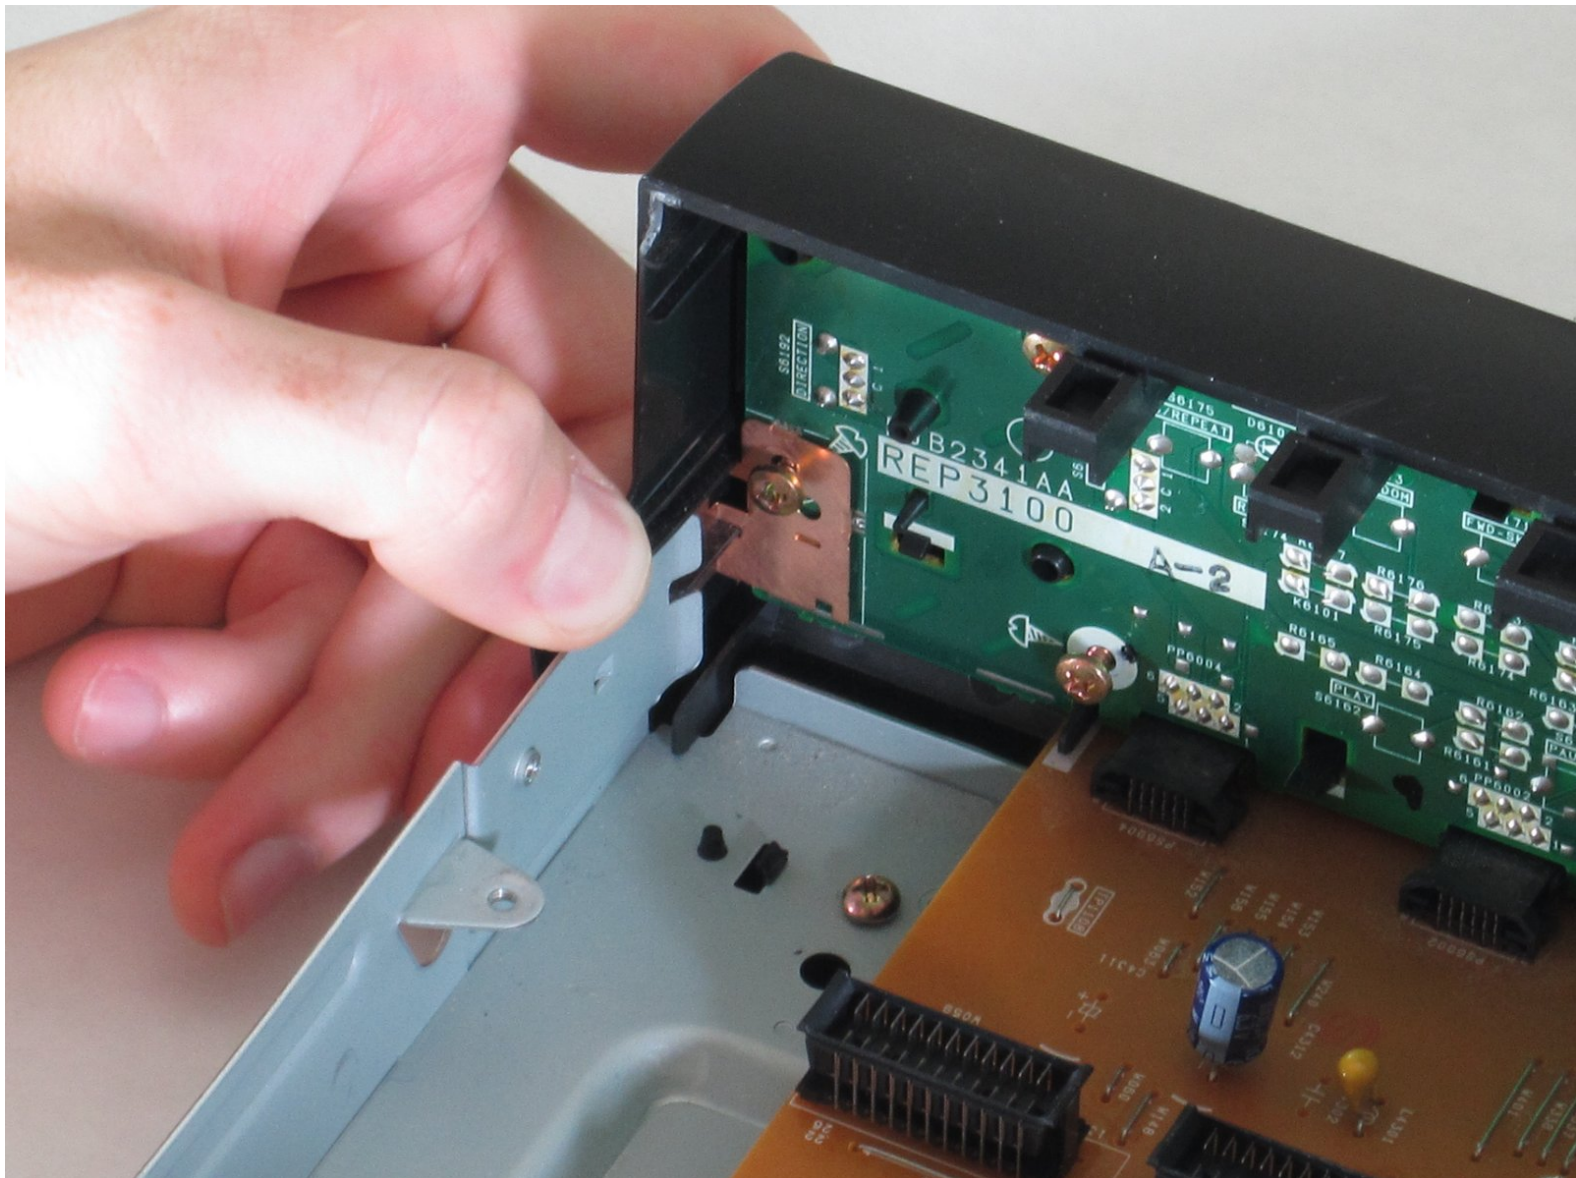

Panasonic DVD-RV31 Player Front Panel Replacement

Removing the front panel from the main body of the DVD player.

Written By: Kevin



 **TOOLS:**

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Disk Tray Cover



- Eject the disk tray from the DVD player before removing power supply.

Step 2



- Evenly lift upward on the disk tray front cover (not slanted, as pictured). This will allow for easier disassembly of the player.

Step 3 — Outer Case




- Remove 3 screws running along back edge of case cover.
- Remove 2 screws from each side of case cover.

Step 4



- Grab edges of cover, pull outward slightly, and pull straight up.

Step 5 — Front Panel

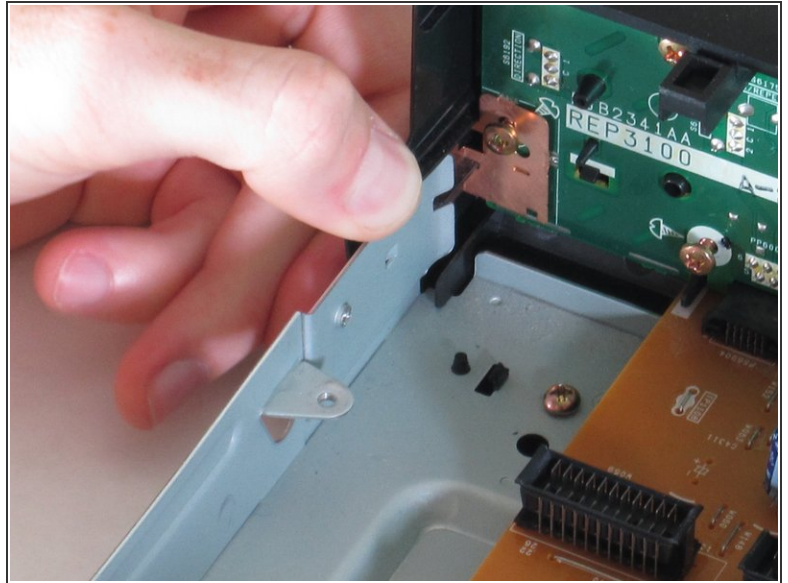

- Lift up the 5 tabs securing the front panel to the chassis. There are 3 on the bottom, and 2 on the inside edges of the panel. Panel should then lift off the player.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-23 06:06:45 AM.