



# Panasonic DVD-RV31 Player Left Control Board Replacement

Removing the left control board from the front panel of the DVD player

Written By: Kevin



 **TOOLS:**

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Outer Case



- Remove 3 screws running along back edge of case cover.
- Remove 2 screws from each side of case cover.


## Step 2



- Grab edges of cover, pull outward slightly, and pull straight up.



### Step 3 — Front Panel

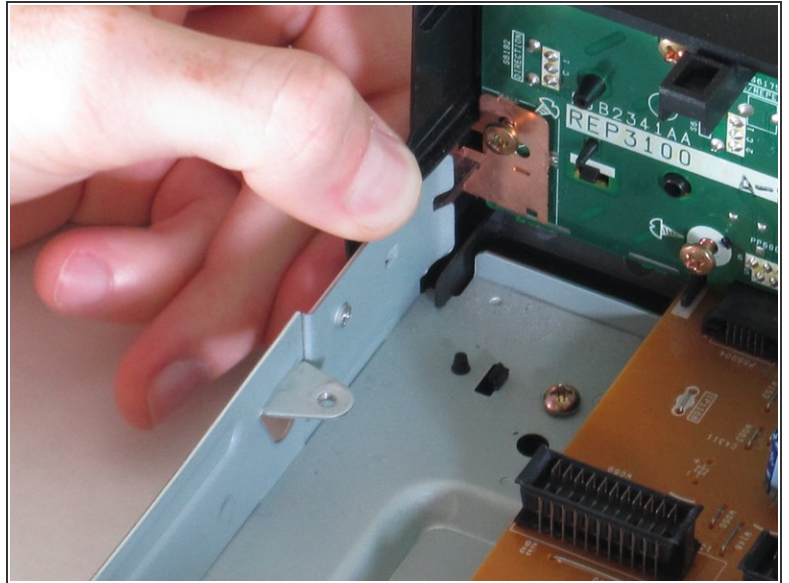


- Lift up the 5 tabs securing the front panel to the chassis. There are 3 on the bottom, and 2 on the inside edges of the panel. Panel should then lift off the player.

### Step 4 — Left Control Board



- Grip jogger dial and lift up. It should come off easily.

## Step 5

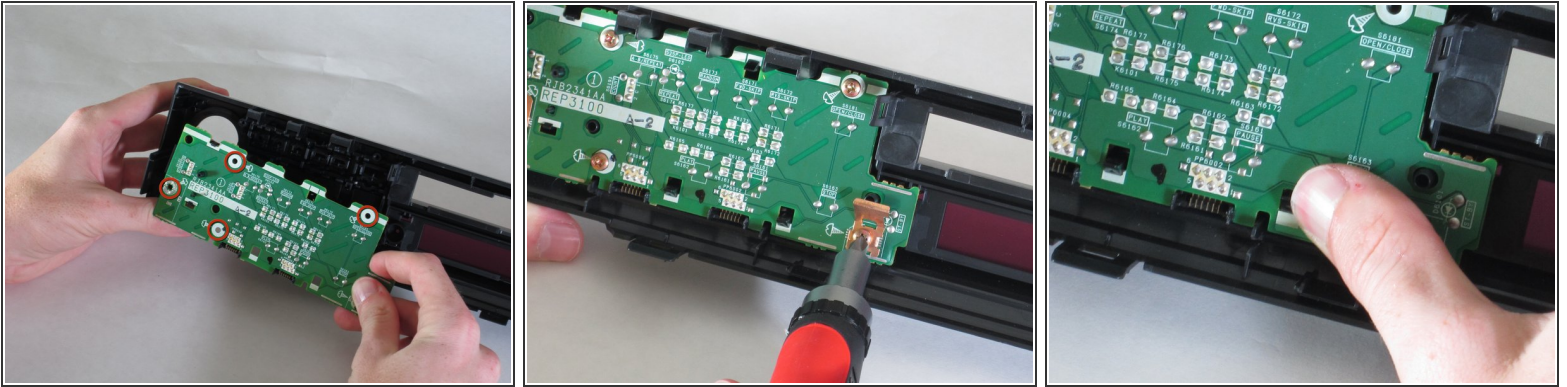

- Remove 4 mounting screws as shown.
- Unscrew and save brass tab.
- Push in 2 plastic retainers and lift out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-18 10:45:35 AM.