



HTC HD2 Battery Replacement

Replace the battery in your HTC HD2.

Written By: Sam Luedloff



INTRODUCTION

Use this guide to remove or replace the battery in the HTC HD2. The battery should be removed before working on any of the phone's internal components.



PARTS:

- [HTC HD2 Compatible Battery](#) (1)
-

Step 1 — Battery



- Carefully pull the rear cover from the back of the phone.
- Place a finger beneath the small lip on the left side of the battery.

Step 2



- Lay the phone down on its screen.
- Lift up on the lip and pull the battery from the phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-12 04:15:48 AM.