




HTC HD2 Vibrator Replacement

If the vibration setting on your phone has stopped working, this guide will allow you to get to the vibrator for replacement or repair.

Written By: Nathan Puchalski

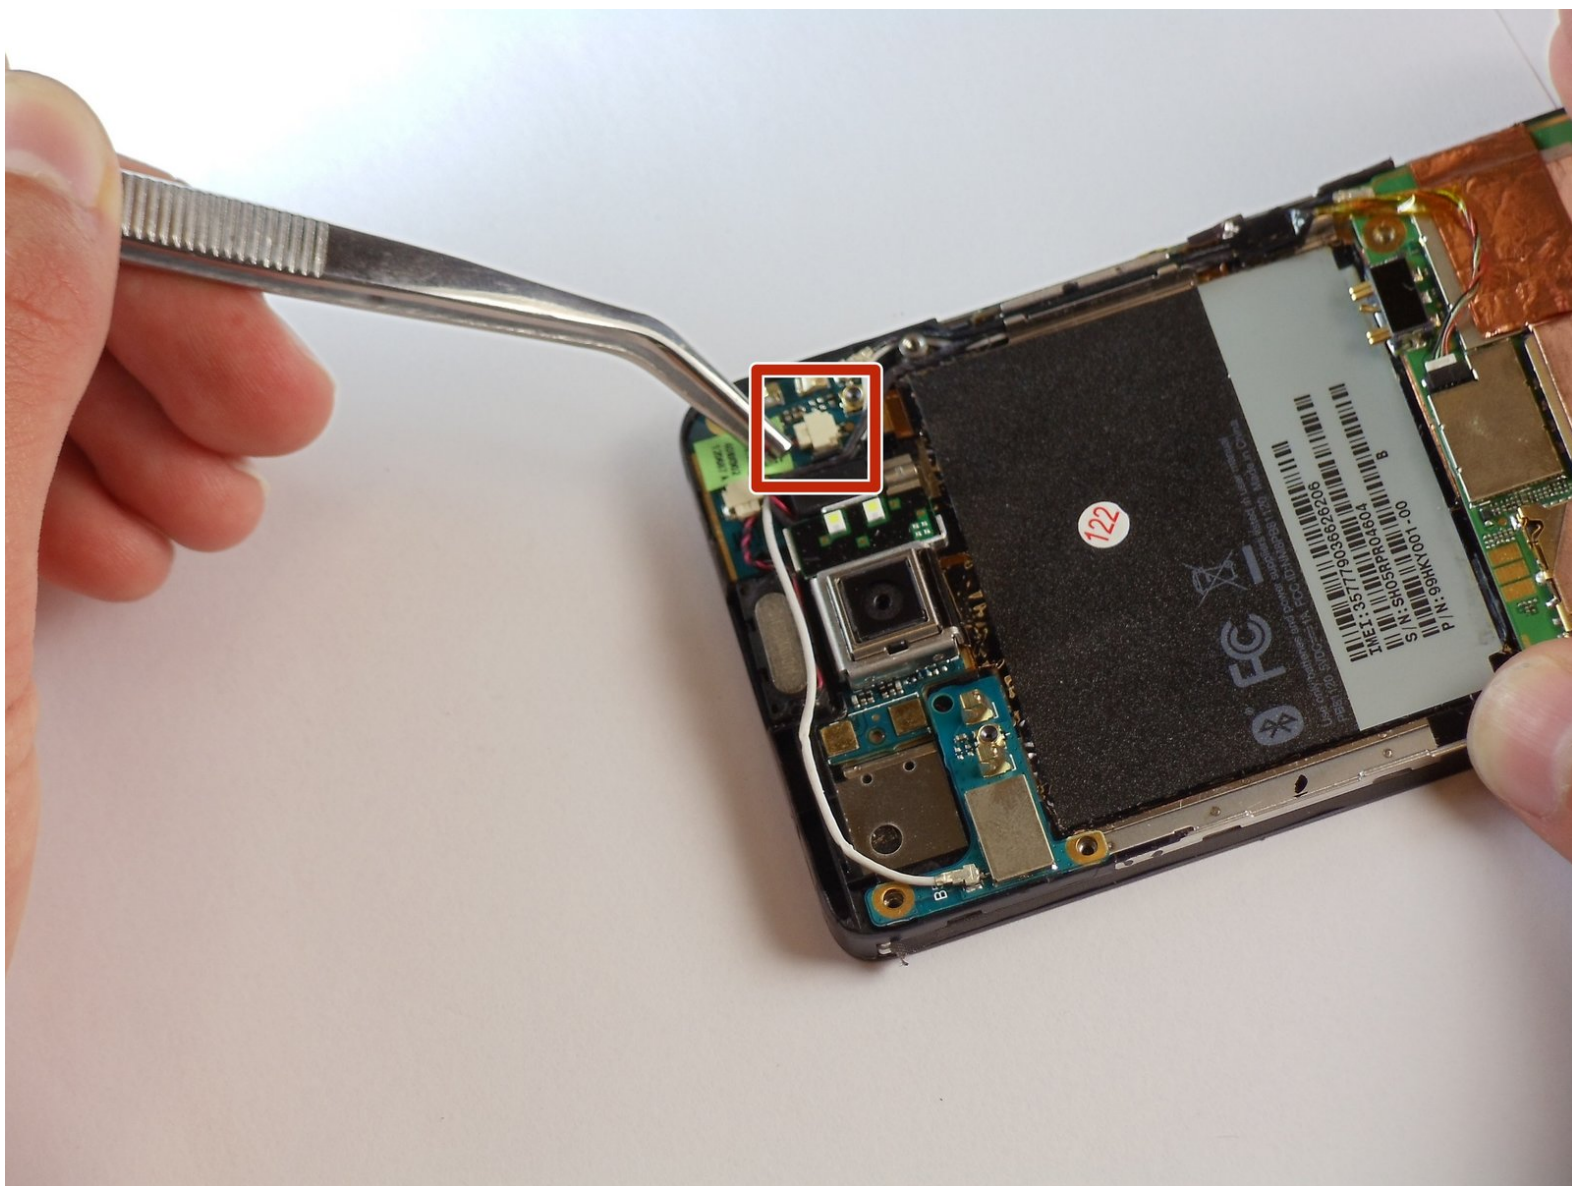

INTRODUCTION

The vibrator is easy to find and remove after the housing has been taken off.

TOOLS:

- [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Battery




- Carefully pull the rear cover from the back of the phone.
- Place a finger beneath the small lip on the left side of the battery.

Step 2





- Lay the phone down on its screen.
- Lift up on the lip and pull the battery from the phone.

Step 3 — Midframe

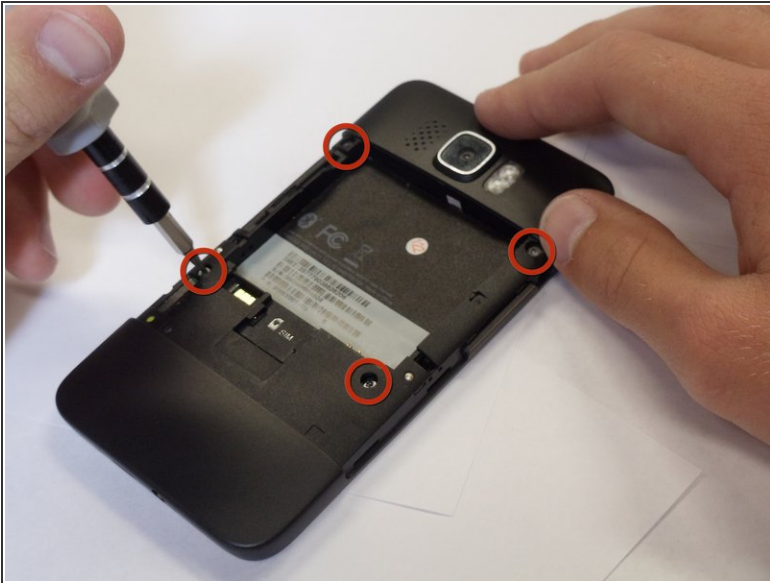


- Remove the four black 3.5mm T5 screws from the back of the phone.

Step 4

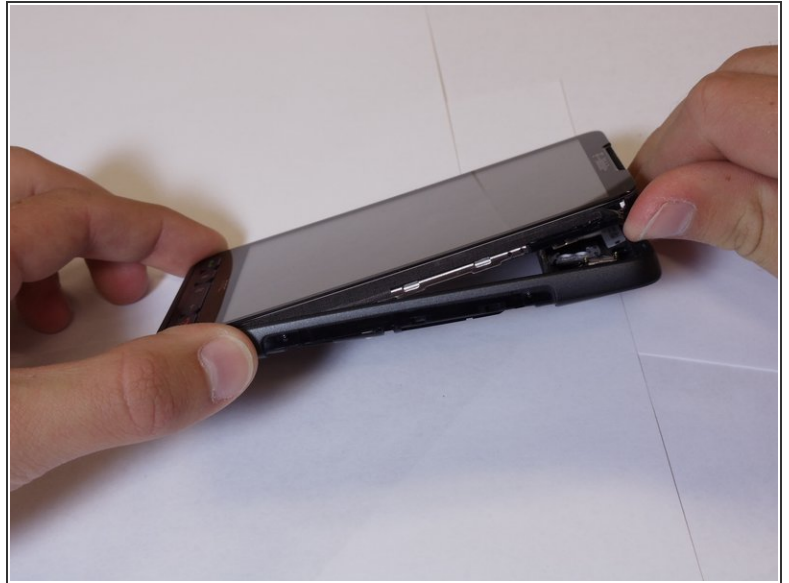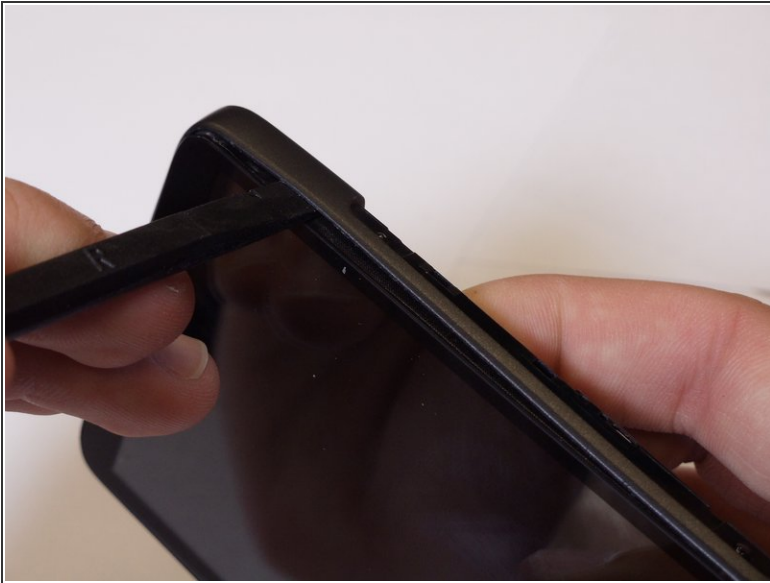


- Insert the flat end of a spudger between the midframe and the display.
- Slide the spudger along the seam between the frame and the display.
- Using the spudger for leverage, carefully pry the midframe away from the display assembly.
 - ⓘ This process will take some effort. Continue to pry slowly and carefully until the frame begins to detach.
- As it releases, pull the midframe away from the phone.
- ⓘ The volume control tab may fall off during removal. It can be easily reattached.

Step 5 — Vibrator

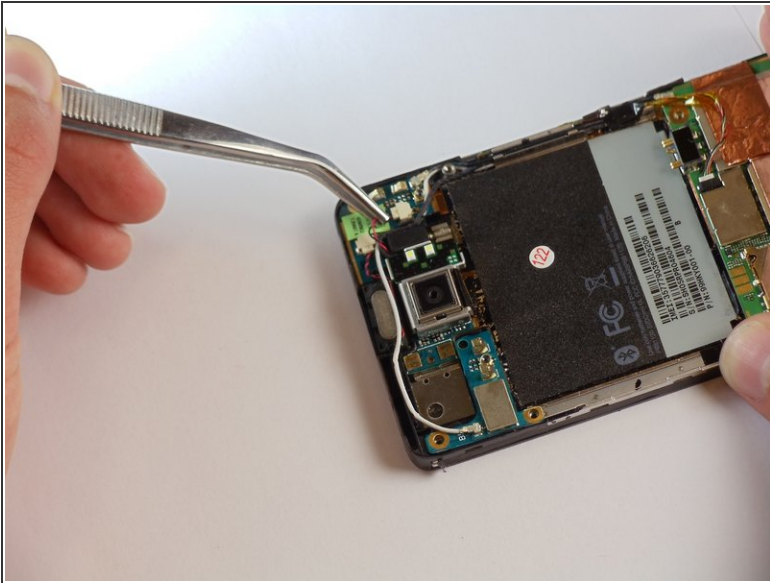

- Set the phone down on its screen.
- Using tweezers, unplug the small vibrator connector from its socket on the motherboard.

Step 6

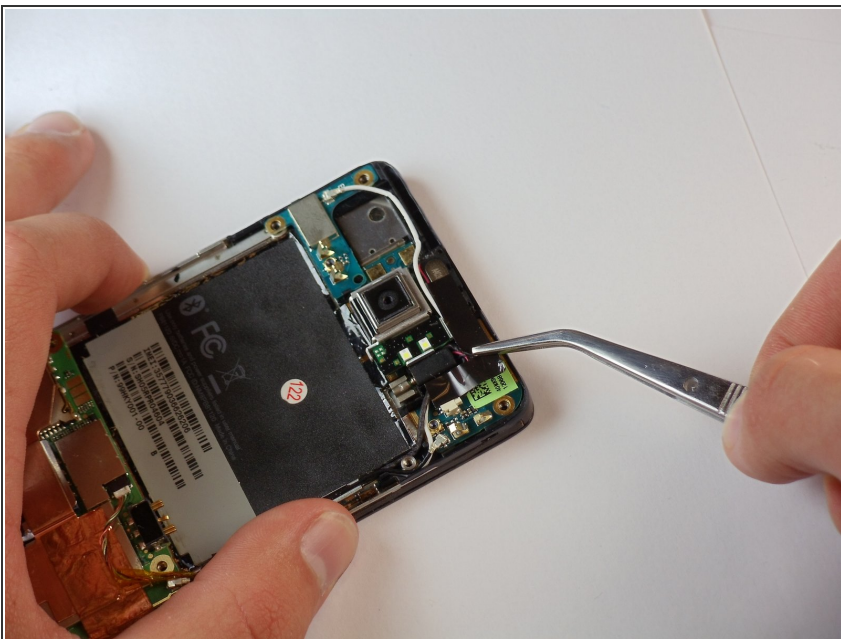

- Pull the vibrator motor from the phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-06 03:16:02 AM.