




Nokia E61i Display Replacement

Use this guide to replace the Nokia E61i screen.

Geschrieben von: Christopher Patton

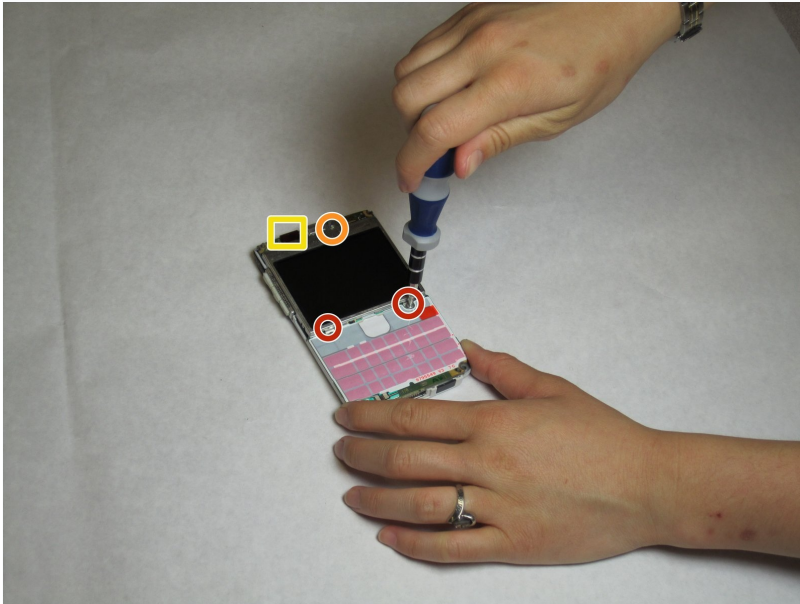

EINLEITUNG

Use this guide to replace the Nokia E61i screen.

WERKZEUGE:

TR7 Torx Security Screwdriver (1)

T5 Torx Screwdriver (1)


T6 Torx Screwdriver (1)

Schritt 1 — Battery




- First, gather all necessary tools.
- Remove the back cover to access the battery by pushing the tab on the bottom of the cover.
- Slide the back cover downwards off of the phone while pressing down on the tab.

Schritt 2

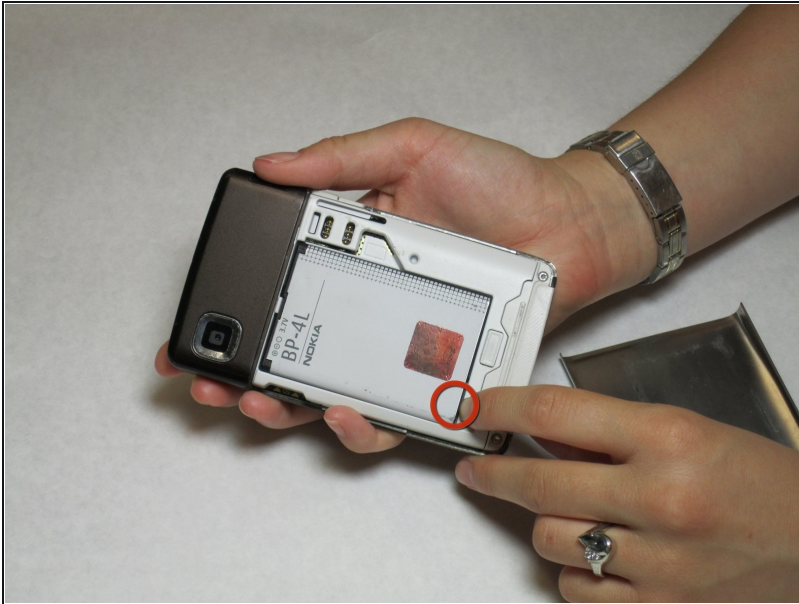



- Locate the bottom-left corner of the phone where there is a spot to remove the battery.

Schritt 3

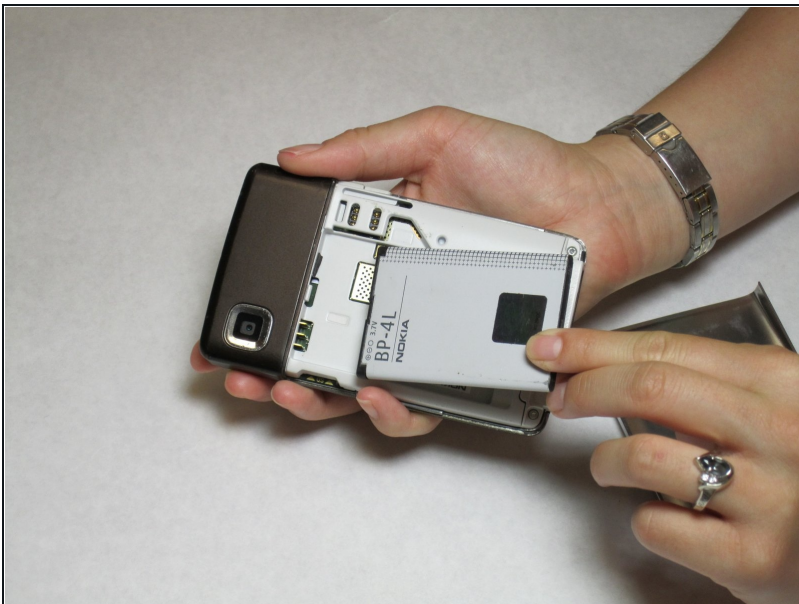

- Lift the battery out using your finger.
- ① The E61i uses a Nokia BP-4L standard battery.

Schritt 4 — Front Cover

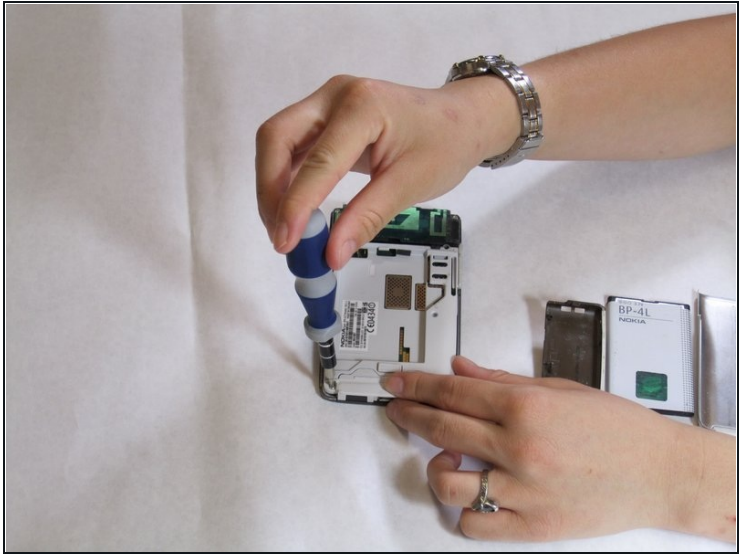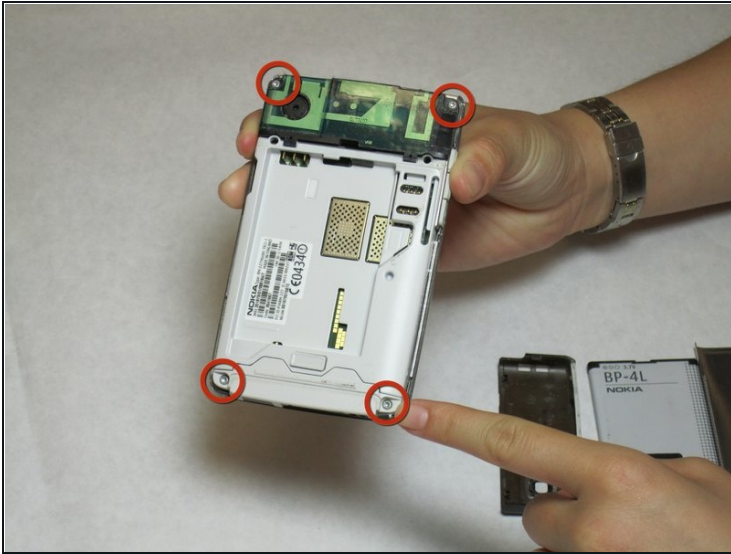



- To remove the top of the back cover, pry the sides and pop it off.
- Remove the four screws that secure the front cover to the rest of the phone using a T7 screwdriver.

Schritt 5




- Remove the cover by pulling it up and off.

Schritt 6 — Display

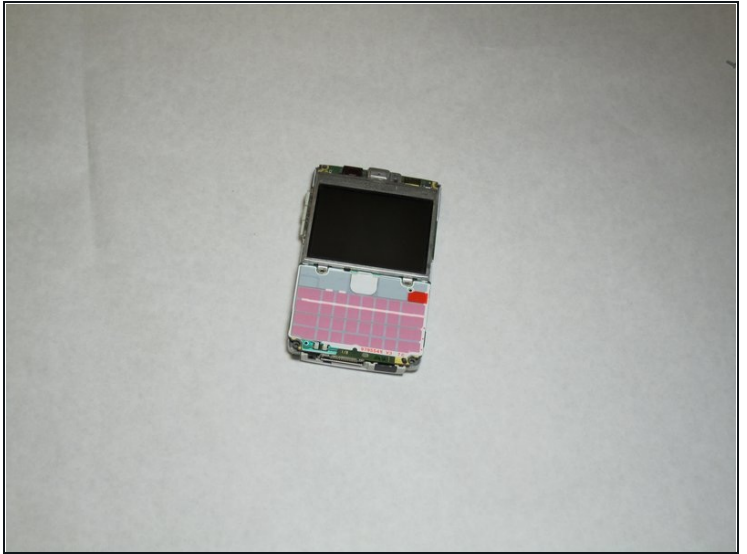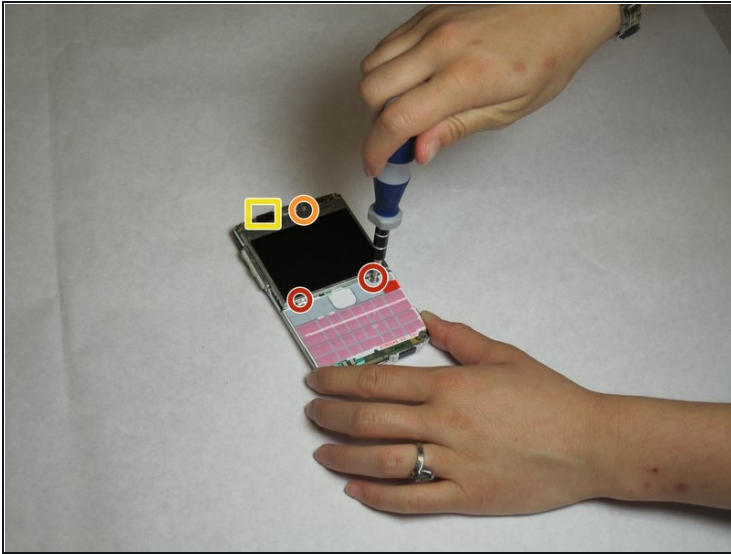

- Take off the casing and keyboard.
- Remove the screws while holding the screen in place using a Torx T6 screwdriver.
- Remove the single screw while holding the screen in place using a Torx T5 screwdriver.
- Lift the ribbon, disconnecting contact with the motherboard.
- ☒ ★ Firmly press the contacts into place to connect the ribbon and the motherboard when reassembling.

Schritt 7

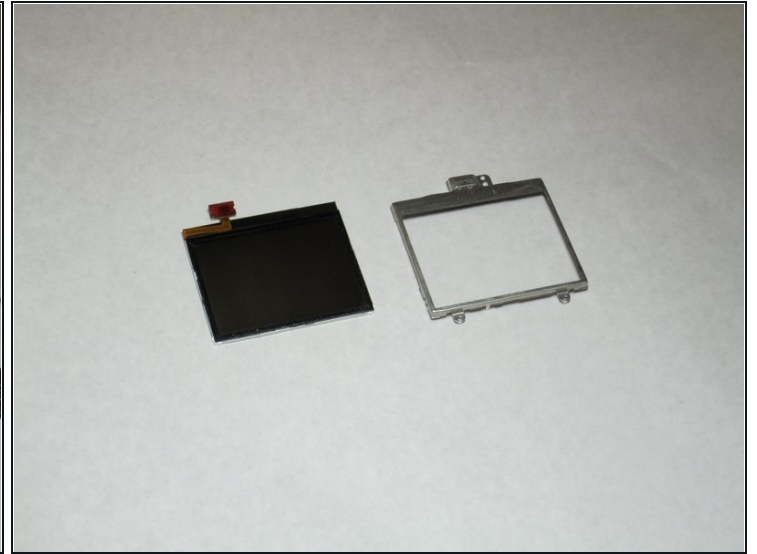

- Gently pull the screen off of the phone.
- Be sure not to rip the sticker that connects the display and the motherboard.
- Pull the silver case off to completely free the cracked or damaged screen.

To reassemble your device, follow these instructions in reverse order.