


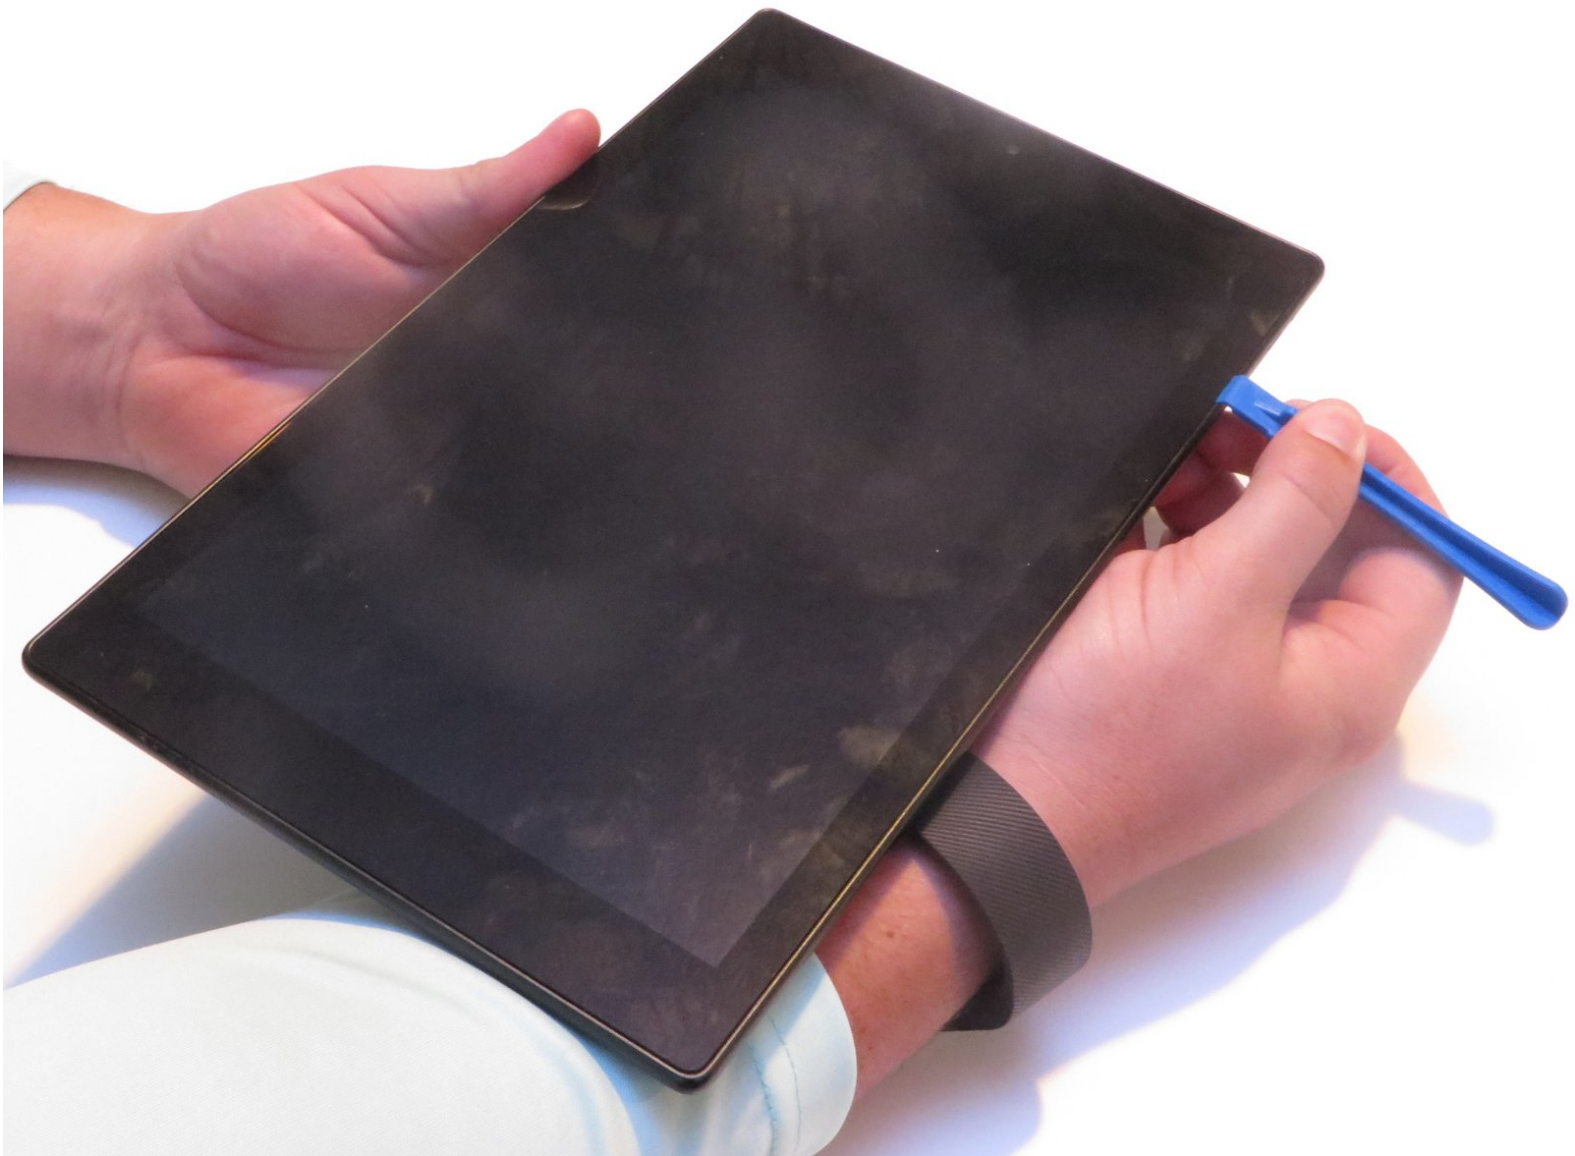

Amazon Fire HD 10 Screen Replacement

Follow this guide to replace your screen and digitizer.

Written By: Jaie Hillery




INTRODUCTION

Before you begin, make sure the device is off. The screen and digitizer will come off as one connected component.

TOOLS:

- [iFixit Opening Tools](#) (1)
-


Step 1 — Screen

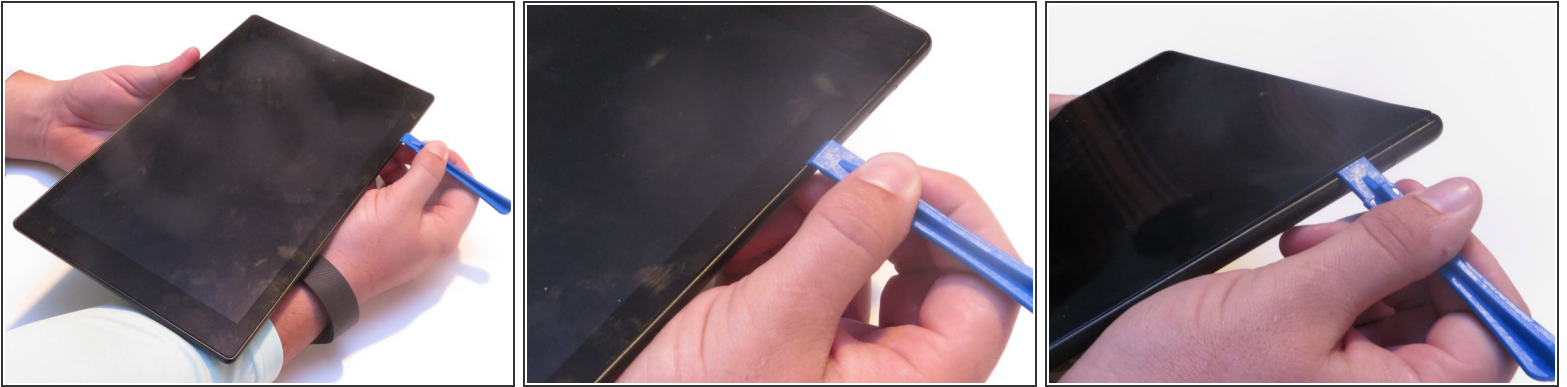

⚠ Avoid prying near bottom right hand side due to LCD Connector

- Use a plastic opening tool to pry the screen up in the right hand corner.

Step 2

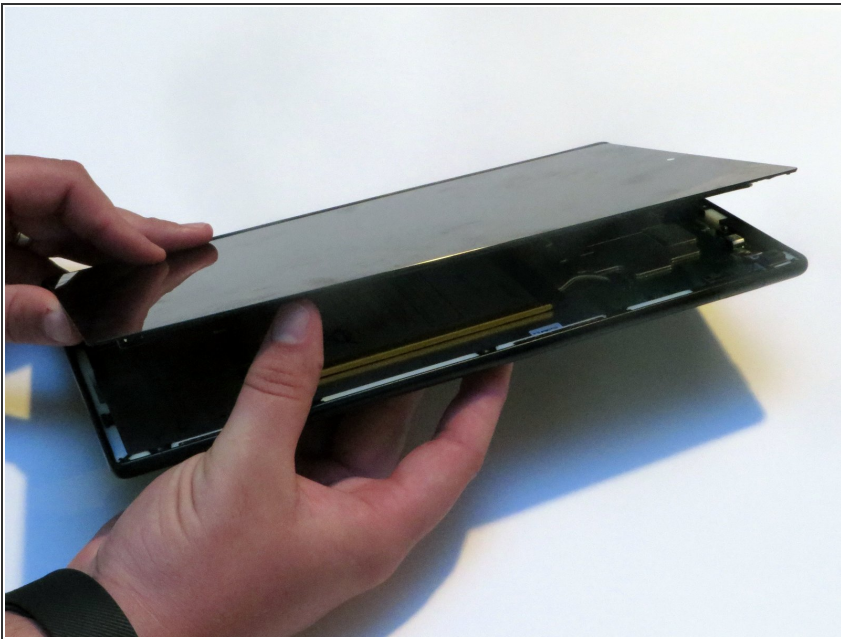

⚠ Do not completely remove the screen yet as there is a ZIF connector connected.

- Lift the screen and digitizer from the case.
- i** You may need to use some force due to the glue.

Step 3



i Be mindful of the ZIF connector.

- Disconnect the ribbon connector from the digitizer side using your hands or the plastic opening tool.

Step 4



- Remove the screen and digitizer from the case completely.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-09 05:17:17 AM.