



Flip MinoHD Casing Replacement

With this guide you will be able to remove the outer casing on the device.

Written By: Abigail Buckenberger



INTRODUCTION

If the casing of your device becomes damaged and needs replaced we have provided you helpful guides to do so. This should be an easy fix and with just a few tools the casing will be removed!

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Casing



- With the plastic opening tool, remove labels from the Flip Mino HD. 2 small black screws should appear.
- With the Phillips Screwdriver 000, unscrew the 2 screws and set aside in a safe place.

Step 2

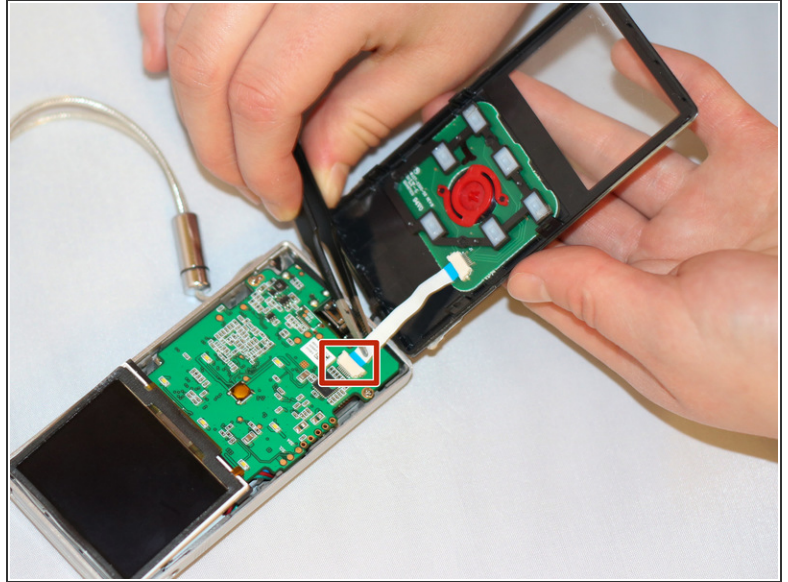

- With the plastic opening tool, gently pry the front casing away from the device by carefully running the tool around each edge and lifting.
- ⚠ Do not pull to remove the casing until all sides are loose. You may break or crack the case.
- Once case is loose, flip up and over the device. Note that casing is still connected to the device.
- Using tweezers, pull connecting strip to disconnect it from its socket on the logic board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 12:52:06 PM.