 




Tagital T9X Volume, power, or return button Replacement

A simple and quick replacement guide for any broken buttons on the Tagital T9X tablet.

Written By: Adam Bamforth

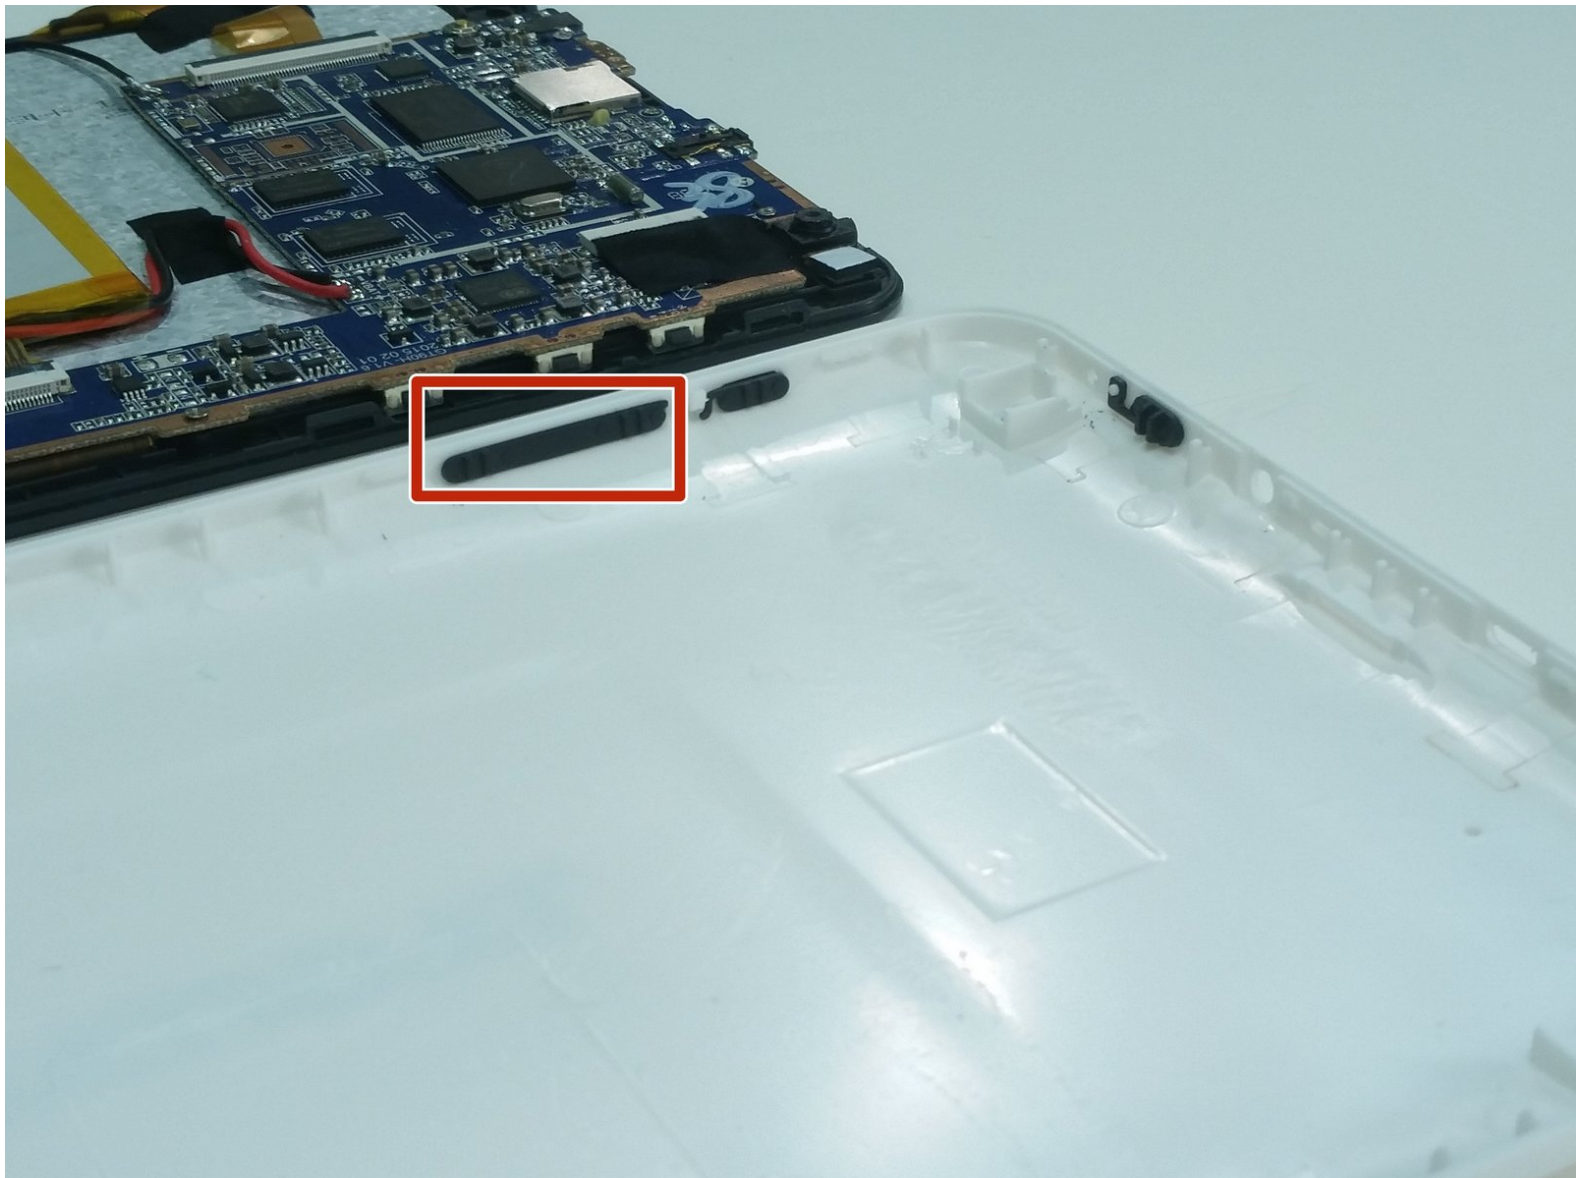

INTRODUCTION

This guide will show how to replace the volume button on your Tagital T9X tablet.

TOOLS:

- [64 Bit Driver Kit](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Cover



- With the tablet turned off, remove the two 5mm Phillips head screws from the top of the tablet.

 
⚠ These screws are extremely easy to lose. Be sure to store them in a safe place.

Step 2



- Use a 1 cm wide plastic opening tool to remove the back panel. Go around the entire back panel to ensure safe removal.
- The power, return, and volume buttons are not firmly secured to the panel; it is likely they will fall off in the process of removing the panel.

Step 3 — Volume, power, or return button

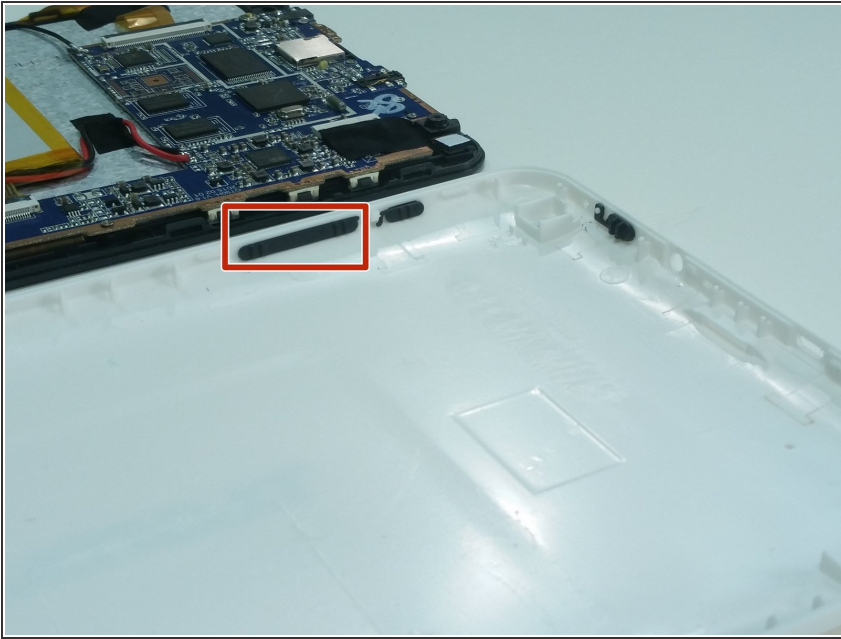

- Remove the broken volume button from the plastic case. Replace it with the new volume button, with the + being closer to the camera opening.
- ⓘ *There are two other small buttons that look very similar to one another; if they fall off as well, put them back in their rightful place.*

To reassemble your device, follow these instructions in reverse order.