



Acer Chromebook CB3-111-C670 Screen Replacement

Replace the screen of your Acer Chromebook CB3-111-C670.

Written By: Allen Lewis



INTRODUCTION

Use this guide to replace the screen of your Acer Chromebook CB3-111-C670. The screen replacement is a simple fix, and shouldn't take long at all.

TOOLS:

- [Screwdriver](#) (1)
- [Heavy-Duty Spudger](#) (1)
- [Tweezers](#) (1)

PARTS:

- [11.6" Chromebook LCD N116BGE-EA2REV.C1](#) (1)

Step 1 — Screen



- ⚠ Unplug and power off the laptop before starting this repair.
- Pry the white frame away from the screen with an opening tool.
- ⓘ As you move the spudger along the seam between the frame and the screen, the clips holding the frame in place will loosen.

Step 2



- Remove the four screws within the silver brackets that are holding the screen to the back of the laptop.

Step 3



- Once you've removed the screws, lift the piece of tape that is covering the display connector.
- Use a spudger to flip up the black tab on top of the connector to unlock the ZIF connector.

Step 4



- Pull the ribbon cable out with tweezers and remove the screen.

To reassemble your device, follow these instructions in reverse order.