



Nikon N2000 (F301) Battery Compartment Replacement

How to remove the Battery compartment for cleaning, testing, or replacement.

Written By: Zachary Phillips



INTRODUCTION

If there is a power problem, you may need to reattach wires to the battery compartment or replace it completely. If the problem is Corrosion, just see the guide on corrosion.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Coin](#) (1)
- [Soldering Workstation](#) (1)

PARTS:

- [Nikon N2000 Replacement Battery Compartment](#) (1)
-

Step 1 — Battery Compartment



- i** In this guide we will be referring to 'left' and 'right' as though the camera's front (the part that says Nikon) is facing you.
- Unscrew the large metal screw on the left side using a quarter and remove the battery cover. (Picture not available)

Step 2



- Use a 00 Phillips head screwdriver to remove the small screw on the far left of the battery compartment.

Step 3



- Pull up on the tab to remove the batteries.
- ⓘ Note: The batteries will probably fall out of their holder.

Step 4



- Use a 00 Phillips head screwdriver to remove the four screws from inside the case.

Step 5



- Remove the battery compartment from the camera.
- ⓘ Note: On some models, the compartment is soldered in by the wires shown. If so you will need to [desolder](#) them.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-01 04:40:29 AM.