



# Checking The Camera's Flash Settings

This guide shows how to change the flash settings on the Canon PowerShot A550.

Written By: Jakub



## INTRODUCTION

If the Canon PowerShot A550 is powered on but does not flash when a picture is taken, the first step is to make sure flash is turned on.

## Step 1 — Checking The Camera's Flash Settings



- Press the circled button (lightning bolt on right side of the circle) until the flash logo appears on the screen

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-15 11:52:52 PM.