



Acer Chromebook CB3-111-C670 Keyboard Key Replacement

Replace a broken key on your Acer Chromebook CB3-111-C670 laptop.

Written By: Tony



INTRODUCTION

Fixing your keyboard key cap is easy. This is a step-by-step guide that shows how you can easily fix an Acer Chromebook CB3-111-C670 keyboard key if it has been removed or misplaced from the keyboard. It will also help you install or put the keyboard key back on the keyboard, if you need to remove the key caps in order to clean the keyboard or try to fix a nonworking key.

TOOLS:

- [Spudger](#) (1)
 - [ESD Safe Tweezers Blunt Nose](#) (1)
-

Step 1 — Keyboard Key



- Remove broken key(s) using the flat end of spudger.
- ⚠ When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The regular spudger and tweezers should be used whenever possible.
- ⓘ When reinstalling the key, no spudger is needed. Just pop it into place with fingers.

Step 2



- Using the flat end of the spudger, very carefully lift up the corners of the cradle.
- With the help of tweezers (needle nose works best), pull the hooks of the cradle out.
- ⓘ For re-installation of the plastic piece use tweezers to put it back in place and pop the bottom half in before the top.

This document was generated on 2020-11-21 05:30:08 AM (MST).

To reassemble your device, follow these instructions in reverse order.