




Sharper Image SVC430 Mount Rubber Washer Replacement

In this guide, the user will learn how to replace the O ring that is inside each mount


Written By: Kathryn Mattingly

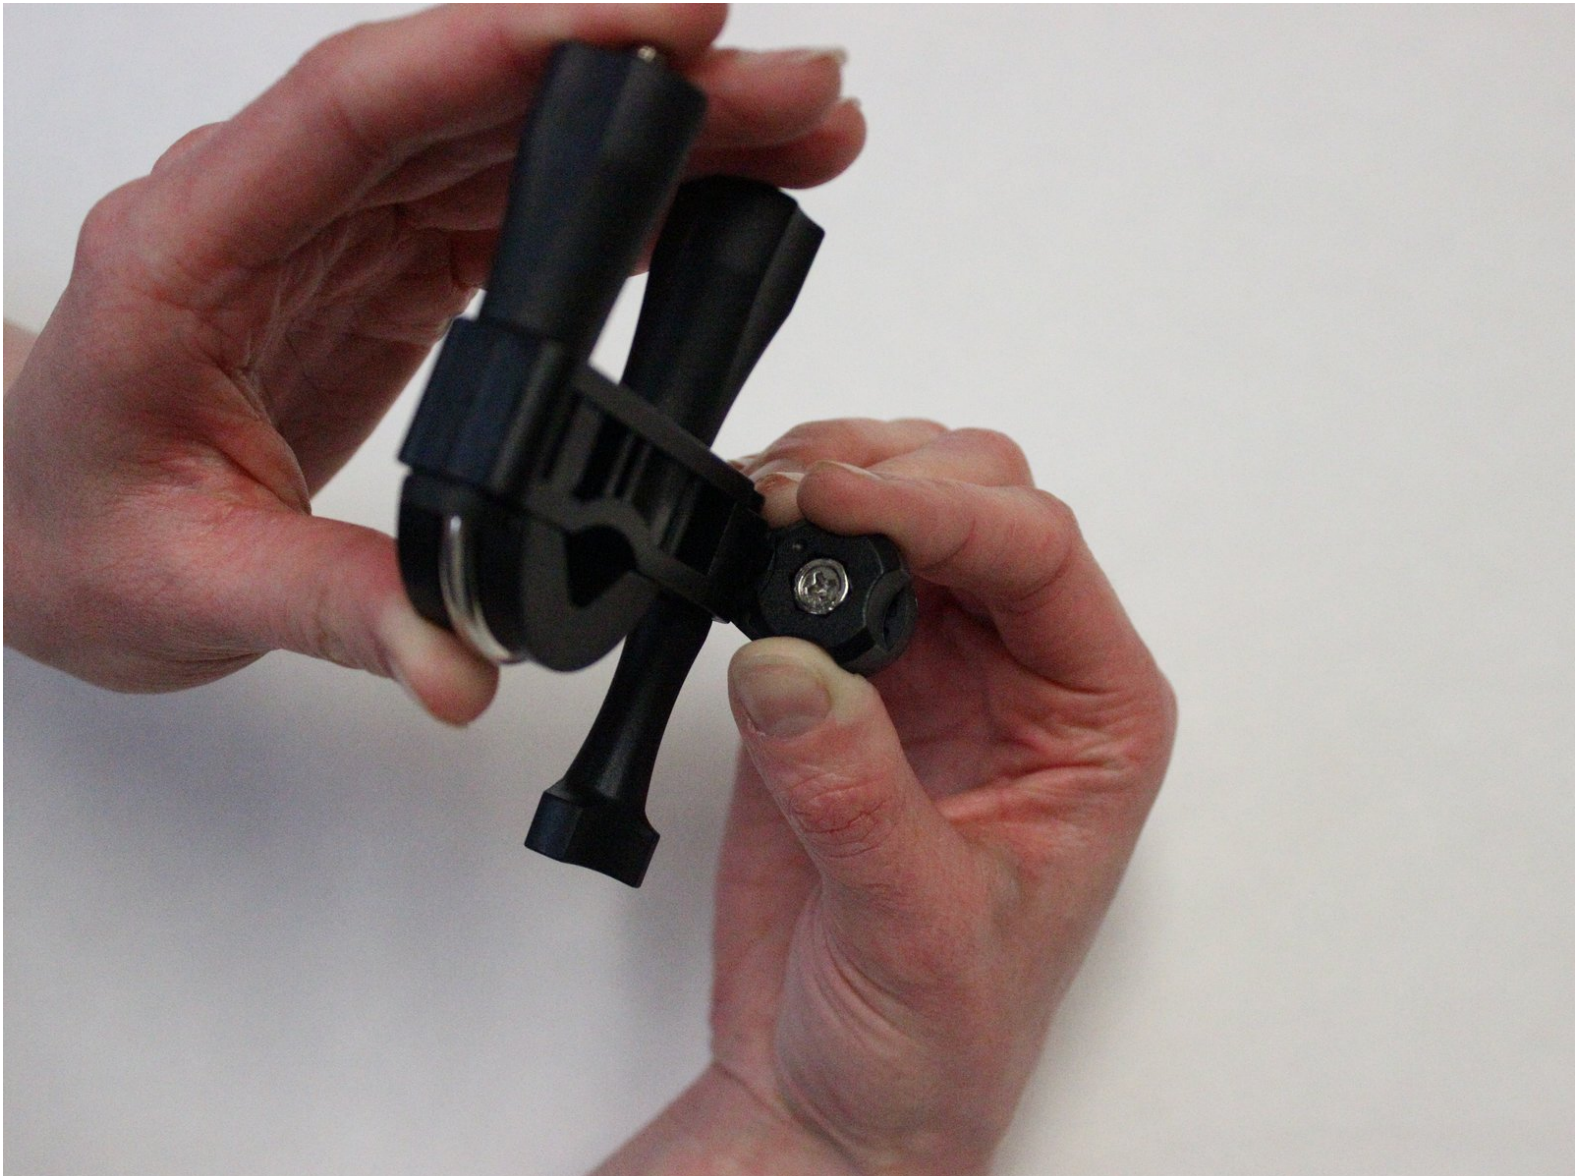

INTRODUCTION


The user will learn how to locate and remove the mount rubber washer.

Step 1 — Mount Rubber Washer

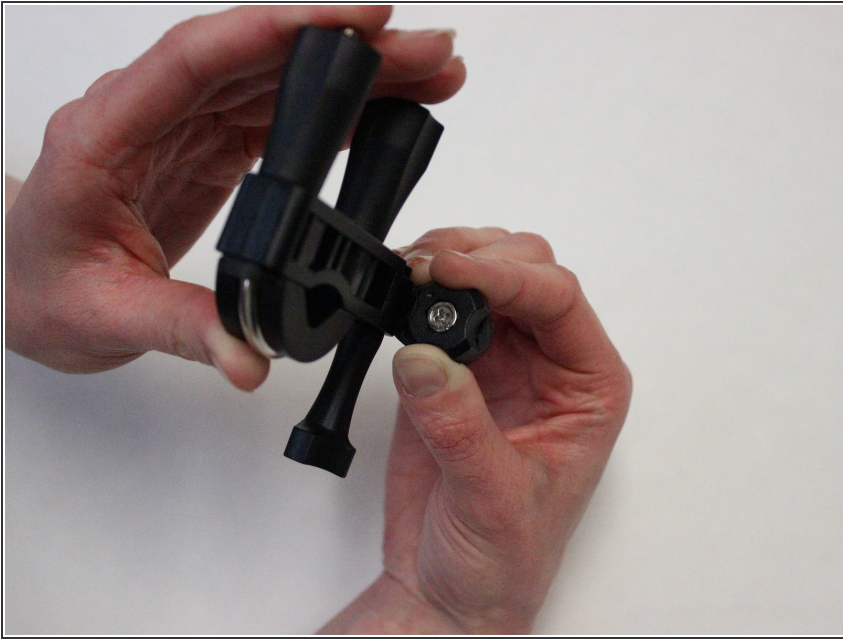


- Locate the knobs on either side of the mount screw.

Step 2

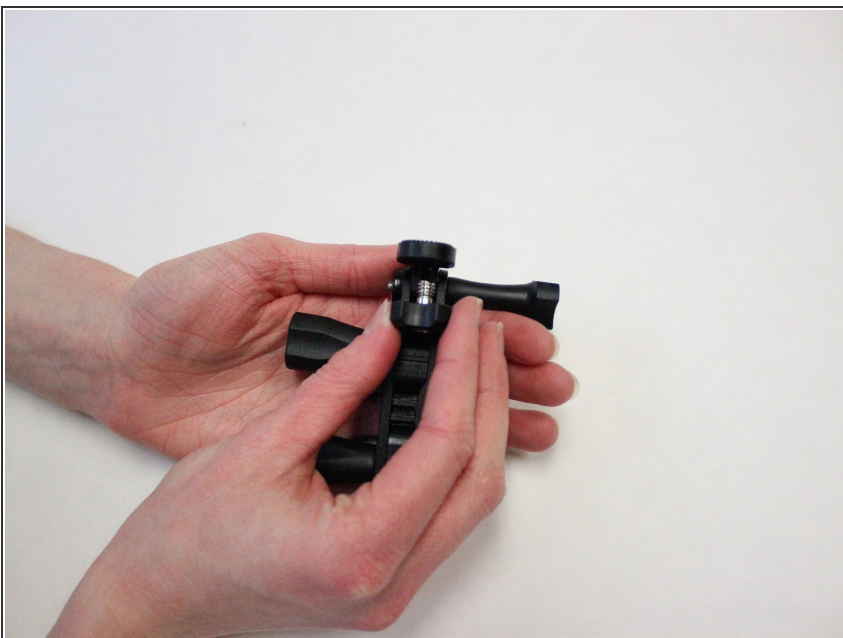

- Twist the knob so it comes off from the mount.

Step 3

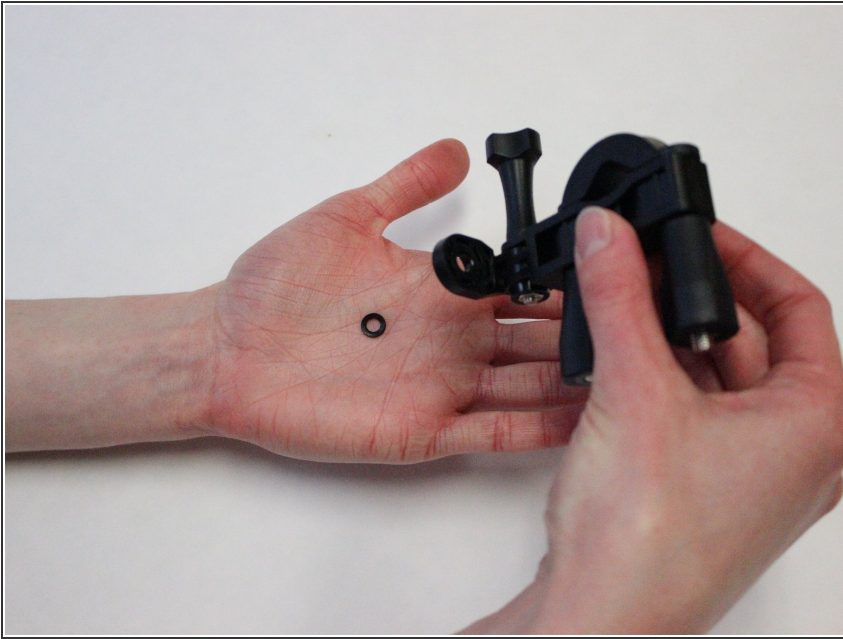

- Once you have twisted apart the knobs, the rubber washer should easily fall out of the base.
- ⓘ This component is identical on the other mount, so this guide applies for both mounts.

To reassemble your device, follow these instructions in reverse order.