



# MacBook Core 2 Duo RAM cover replacement

Written By: Uhucream



---

## INTRODUCTION

The RAM cover keeps the RAM detachment lever from interfering with the battery and plays a role in protecting the HDD.

---

### TOOLS:

- [Coin](#) (1)
- [Phillips #00 Screwdriver](#) (1)

### PARTS:


- [MacBook Memory Cover](#) (1)

## Step 1 — Battery



- Rotate the battery latch 90° in clockwise with a coin.

## Step 2

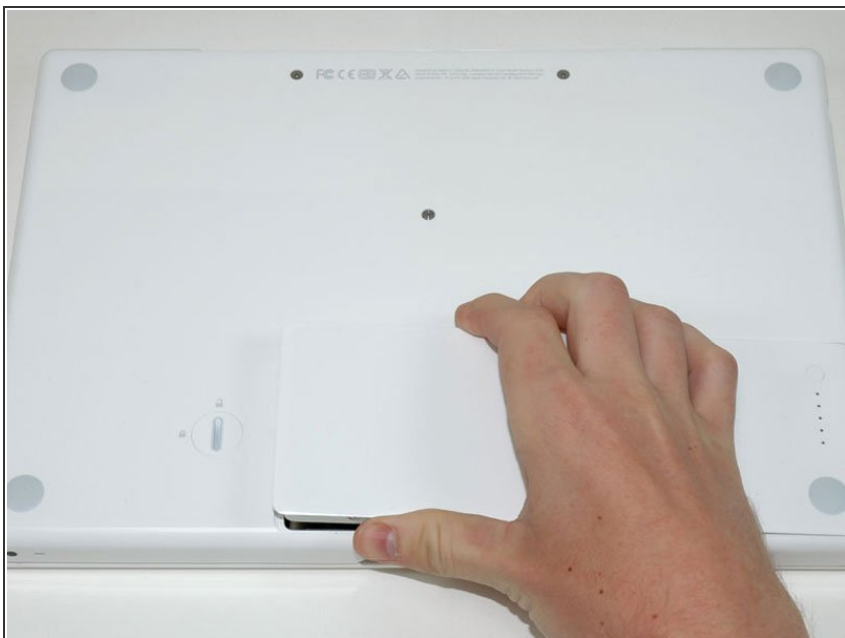

- Lift the hatch, and remove it from the laptop

## Step 3 — RAM cover



- Please remove the three Phillips screws equally spaced on the partition of the battery on the back side of the main unit.
- ✦ Since the screw is fixed to the metal memory cover, there is no worry of losing it.
- ⚠ (Translator's Comment) Although I am unable to turn Phillips (Phillips) screws in accordance with the JIS standards sold in Japan, since it does not mean that the shapes are perfectly matched, There is a possibility that it may not be possible to reassemble in the worst case because it is scraped.
- Drivers for Phillips screws are sold with the notation PHxxx or PH # xxx if going to a home center etc. (x is a number, it is like 000, 00, 0, 1, 2 ... from the smallest tip order). Or you can also purchase it at the iFixit store because it is sold.

## Step 4



- Pull the L-shaped RAM cover towards you and remove it from the laptop.

To reassemble your device, follow these steps in reverse order.

This document was last generated on 2019-07-11 01:44:13 AM.