



Panasonic DVD-RV31 Player Disk Tray Cover Replacement

First step to dissassembling the Panasonic DVD-RV31 Player.

Written By: Chris Grasmick



INTRODUCTION

This step makes disassembling the entire DVD player a lot easier.

Step 1 — Disk Tray Cover



- Eject the disk tray from the DVD player before removing power supply.

Step 2



- Evenly lift upward on the disk tray front cover (not slanted, as pictured). This will allow for easier disassembly of the player.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 09:20:09 AM.