




Kodak S100 EF Back Cover Replacement

This will guide in removing the back cover to get inside the Kodak S100 EF.

Written By: Michelle

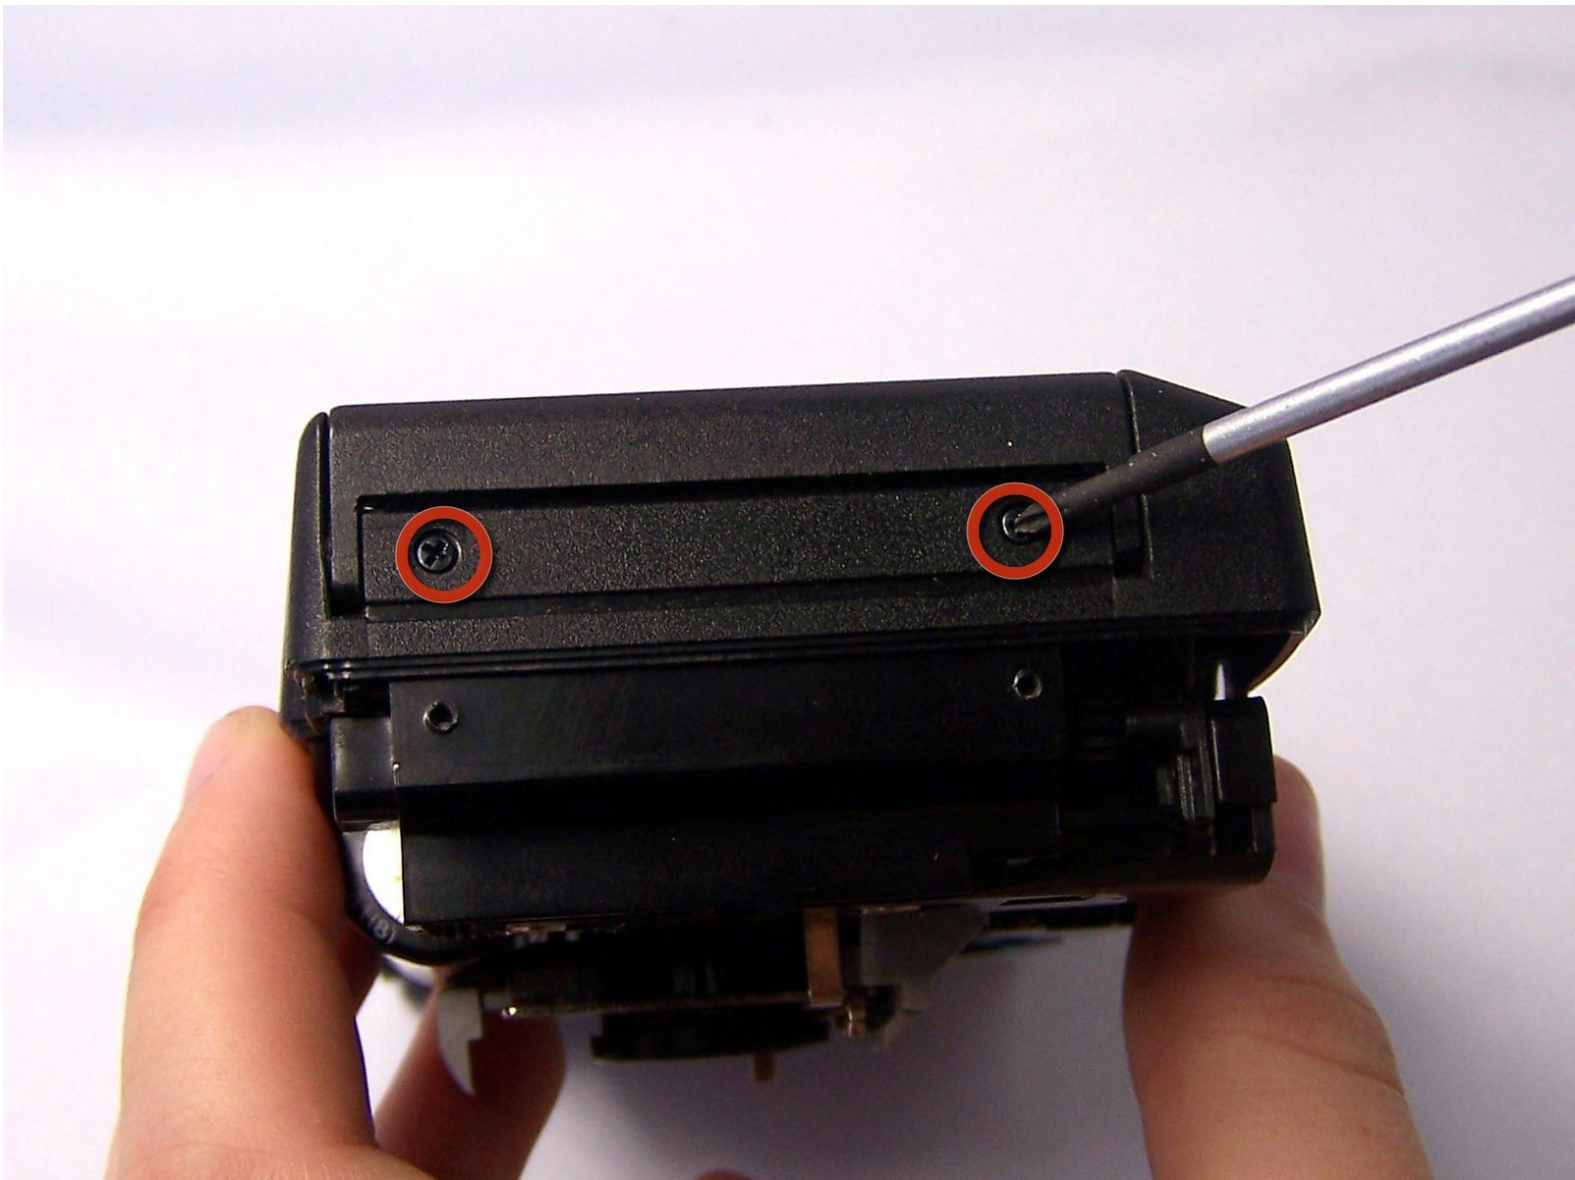



INTRODUCTION

Use this guide to replace the back cover.

TOOLS:

- [64 Bit Driver Kit](#) (1)
-

Step 1 — Back Cover

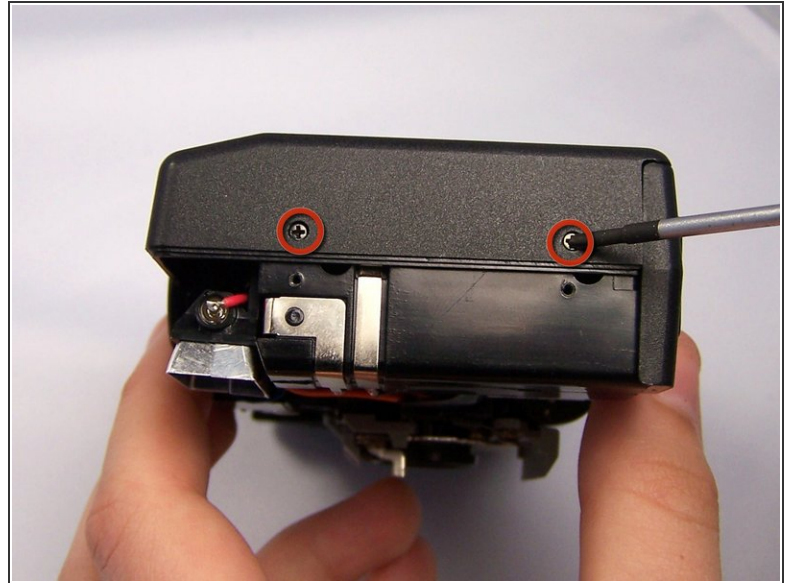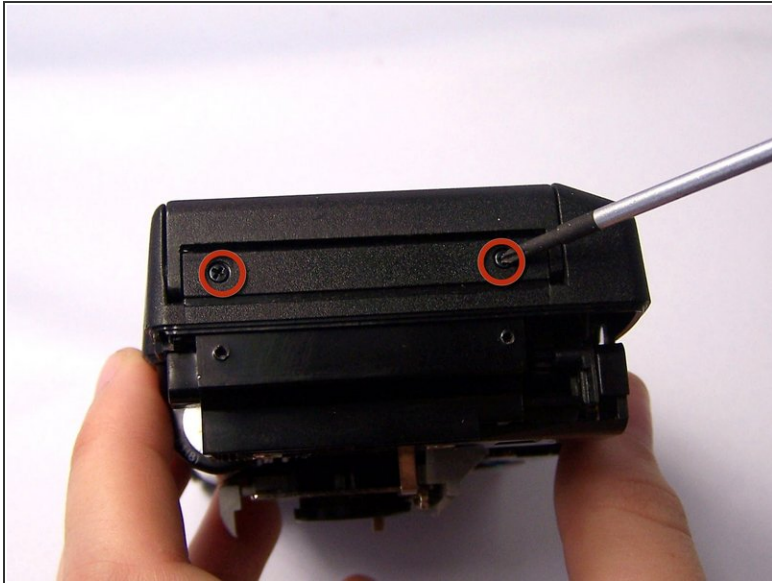

- Remove the two 6.2mm Phillips screws on both sides of camera's back cover.

Step 2



- ⓘ Turn camera so the bottom is facing up and the front is facing away.
- Remove the two 6.2mm Phillips screws on the bottom back cover of the camera.
- Back cover is now unscrewed and can be removed.

Step 3



- ⓘ Have the back of the camera facing up.
- Unscrew the 6.2mm Phillips screw next to the viewfinder.
- The back cover is now unscrewed. Lift up and pull the cover off evenly.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-08 07:06:42 PM.