


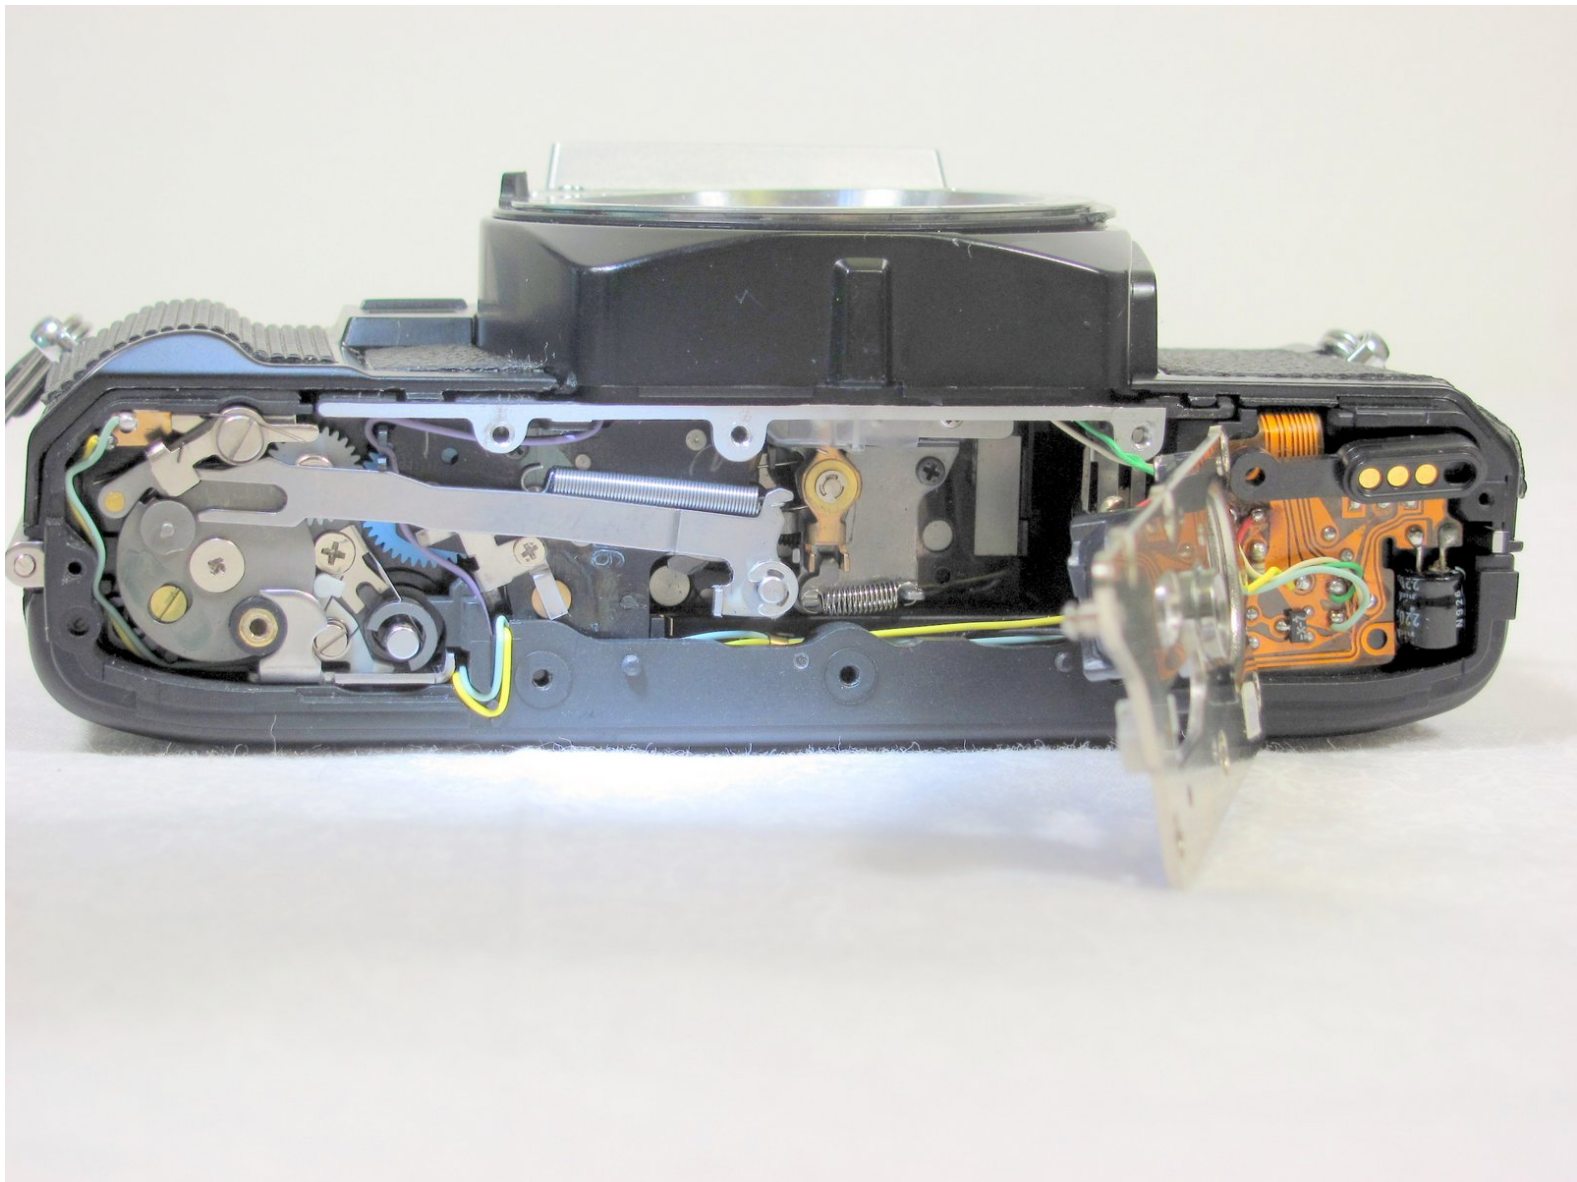

# Removing Minolta X-370 Bottom Cover

A lot of the mechanical components of the camera are located behind the bottom cover. It is very easy to remove.

Written By: Nick



---

## INTRODUCTION


Only requires removing a few screws. No special tools required.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Minolta X-370 Battery Replacement

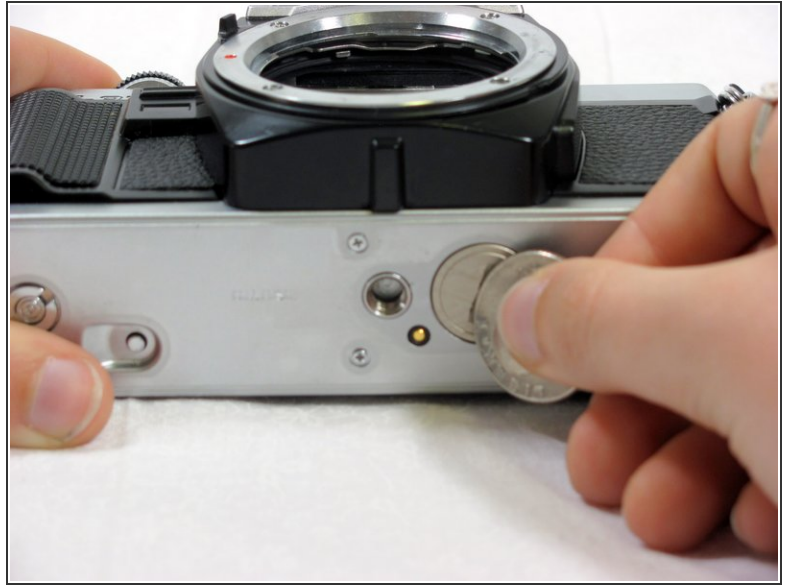

- Flip the camera so that the bottom is facing you.
- Take a spare coin and unscrew the battery cover off.

## Step 2




- Remove the batteries, making sure to note their proper alignment.

### Step 3 — Bottom Cover




- Remove two 4.8mm screws.
- Remove one 3.4mm screw.
- Remove one 2.65mm screw.
- Lift off the back cover.

### Step 4

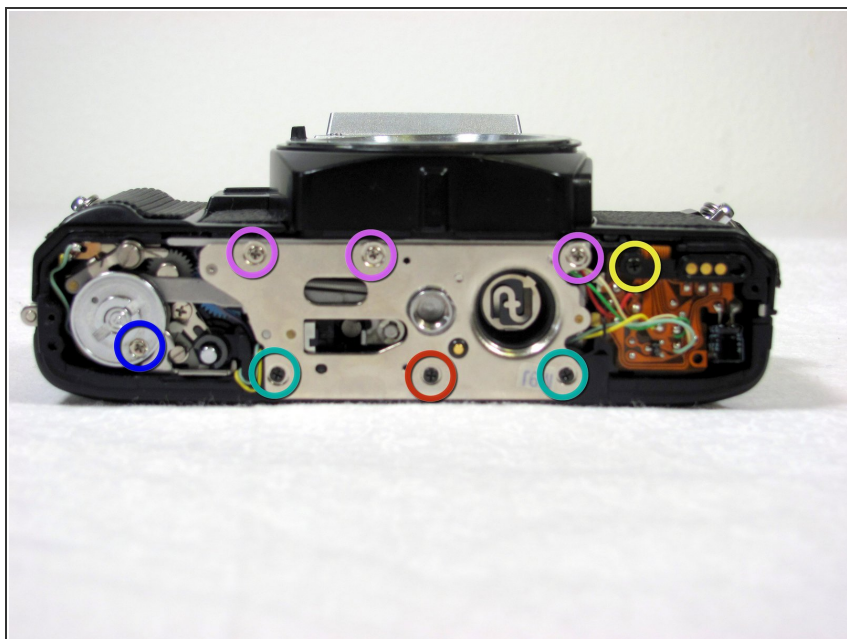

- Remove three 3.5mm screws.
- Remove two 3.8mm screws.
- Remove one 6.35mm screw.
- Remove one 4mm screw. Lift off the disk.
- Remove one 5.11mm screw.

## Step 5

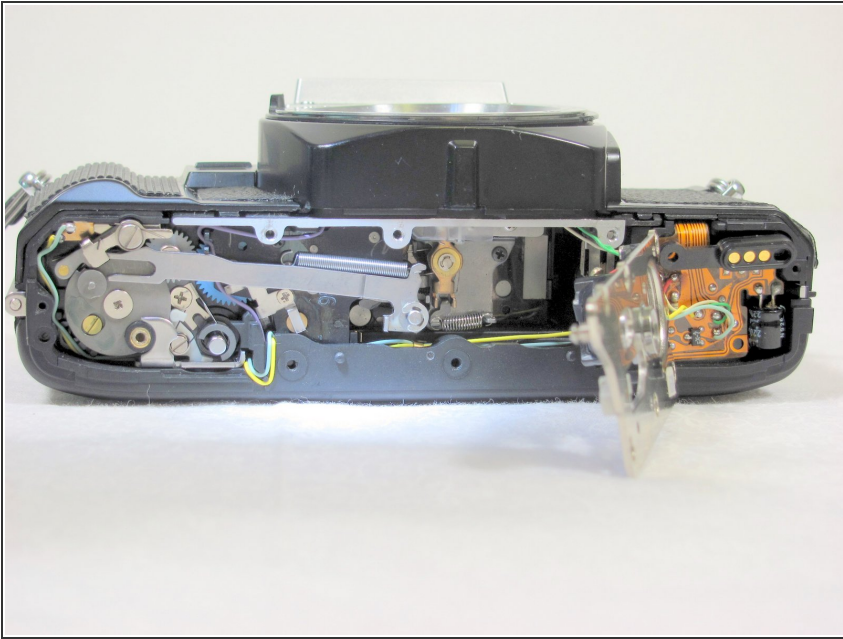

- Lift up the silver, metal piece
- ⓘ Please note that some internal pieces may come loose during this process.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-23 10:28:29 PM.