



# Removing Minolta X-370 Film Winding Lever

Sometimes the film winding lever can become jammed or stuck. This guide will fix these issues.

Written By: Nick



## INTRODUCTION

This is a very simple task, only requiring a screwdriver.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Film Winding Lever



- Lift up the winding lever and rotate it clockwise to open the back film compartment.

## Step 2



- Lift up the winding handle and remove one 3.85mm screw.
- Remove the film winding handle.

### Step 3



- Pull the film winder down until it comes free.

⚠ Do not close the film compartment. The compartment will not open without the film winding lever installed properly.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 02:26:00 AM.