



Nokia 5310b XpressMusic Keypad Replacement

This guide will show you how to install/replace the battery for the Nokia 5310b cellphone.

Written By: Max Kirby



 **TOOLS:**

- [Spudger](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Slide the back cover down with your thumb.
- *Note: the battery cover is not shown in this picture

Step 2




- Gently lift the battery with a fingernail and remove it from its housing.
- *Note: the battery may be replaced or repaired at this step

Step 3 — Keypad



- On some models, the front case is screwed down from the back. Follow steps 5 and 6 FIRST to remove the camera cover and two T6 screws, before removing the faceplate.
- Use the Spudger to gently pry up the edges of the front face plate
- At the center of the faceplate edge below the music keys there is a small latch on each side.

Step 4

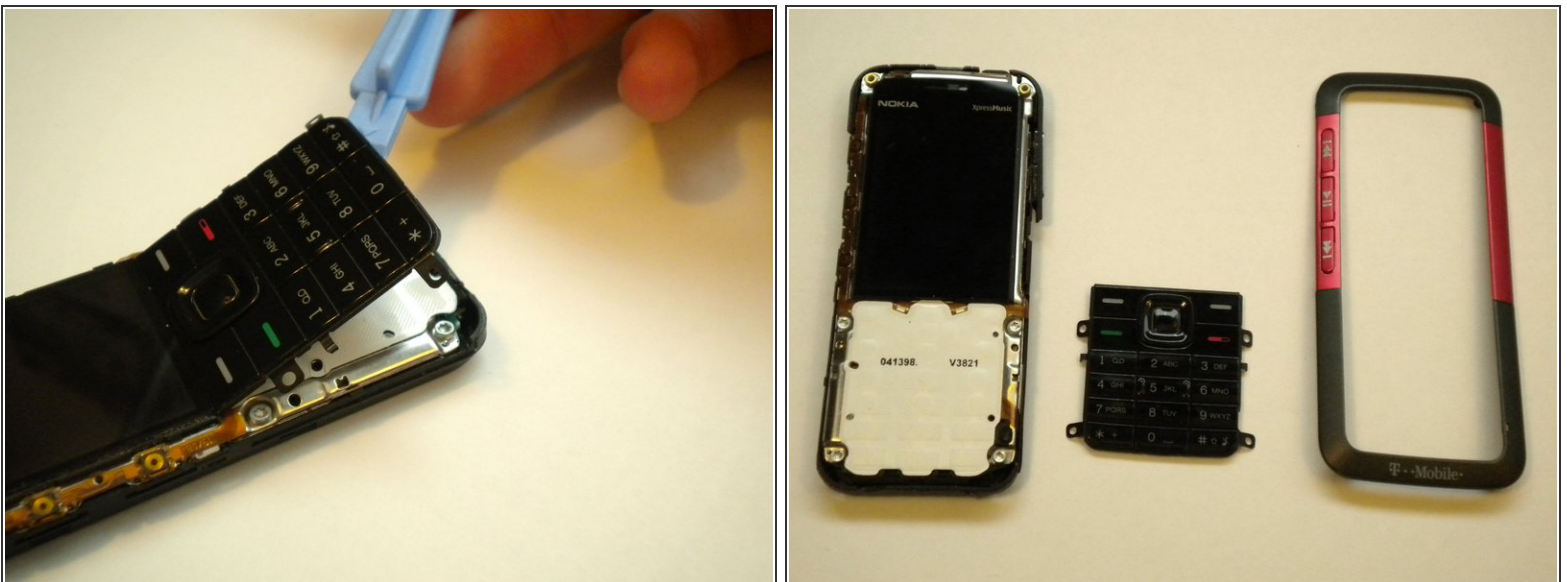

- Lift up the keypad from the bottom with either the spudger or your finger.
- Note: at this time the keypad can be removed and replaced

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 04:29:23 PM.