



Acer Chromebook CB3-111-C670 Battery Replacement

Replace a faulty battery in the Acer Chromebook CB3-111-C670.

Written By: Tony



INTRODUCTION

This guide will show you how to replace a faulty battery in the Acer Chromebook CB3-111-C670.



TOOLS:

- [64 Bit Driver Kit](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)




PARTS:

- [Acer CB3-111-C670 Chromebook Battery](#) (1)
 - [Acer CB3-111-C670 Chromebook Lower Case](#) (1)
-

Step 1 — Battery




 Be sure to have completely shut down the device before attempting to open it.

- Flip the device over and remove the twelve Phillips screws.

Step 2



- Use a spudger or plastic opening tool to remove the bottom plastic casing by inserting the edge of your tool in between the crevices of the laptop case.

 Be careful when removing the bottom case. A ribbon cable is connected to both the motherboard and the casing.

Step 3



- Disconnect the battery power connector that is connected to the motherboard.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-21 07:32:41 AM.